



DRAFT ARMS AND STABILIZER BARS

REF.	PART NO.	DESCRIPTION	REQ'D
1 G	45353	ARM - draft, L. H. (See ref. 29)	1
2 G	45352	ARM - draft, R. H. (See ref. 30)	1
3 G	16736	LINK - sway chain	4
4 A	30117	CHAIN - sway (See ref. 41)	2
5 G	45127	SHACKLE - chain (includes ref. 6 and 7)	4
6 G	46139	PIN - shackle	4
7 132-	26	PIN - cotter, 3/32" x 3/4"	4
8 A	35471	PIN AND LOCK - yoke to draft arm (See ref. 31)	2
9 A	35472	LOCK - float	2
10 132-	148	PIN - cotter, 1/4" x 1-1/4"	2
11 G	16911	BRACKET - pivot, draft arm and stabilizer bar	4
12 16-	10128	BOLT - upper, 5/8" x 8" N. F. hex. hd.	4
12 16-	10136	BOLT - lower, 5/8" x 8-1/2" N. F. hex. hd.	4
13 25-	1110	NUT - 5/8" N. F. hex.	8
14 92-	10	LOCKWASHER - 5/8" std.	8
15 115-	509	BOLT - pivot, 5/8" x 6-1/4" N. C. hex. hd. Gr. 8	2
16 92-	10	(Use ref. 32 and 36)	2
19 A	35148	LOCKWASHER - 5/8" std.	2
		SPACER - outer, draft arm (w/old style draft arm)	2
		(See ref. 36)	2
20 A	35147	WASHER - spacer (w/old style stud only)	4
21 G	16734	BUSHING - pivot, draft arm (w/old style stud only)	2
22 A	35827	SPACER - inner, draft arm (w/old style stud only)	2
23 A	35541	BAR - stabilizer, adjustable (See ref. 28 and 41)	2
24 25-	1412	NUT - jam, 3/4" N. C. hex.	2
25 A	35542	END - stabilizer bar	2
26 A	35543	PIN - mounting, stabilizer bar	2
27 A	33509	KLICK PIN - stabilizer bar	4
28 G	16757	BAR - stabilizer, solid	2
29 A	36769	ARM - draft, L. H. (Heavy duty)	1
30 A	36768	ARM - draft, R. H. (Heavy duty)	1
31 A	36883	PIN AND LOCK - yoke to heavy duty draft arm	2
32 A	38215	STUD - pivot, draft arm (Replaces A36386)	2
34 25-	1010	NUT - 5/8" N. C. hex.	2
35 92-	10	LOCKWASHER - 5/8" std.	2
36 A	38214	SPACER - draft arm (Replaces A36386)	2
37 13-	1048	BOLT - chain to bracket (5/8" x 3" N. C. hex. hd.)	2
38 A	21818	WASHER - plain	2
39 25-	1010	NUT - 5/8" N. C. hex.	2
40 92-	10	LOCKWASHER - 5/8" std.	2
41 A	36767	CHAIN - sway and stabilizer	2
42 13-	1036	BOLT - chain to draft arm (5/8 x 2-1/4" N. C. hex. hd.)	2
43 A	21818	WASHER - plain	2
44 25-	1010	NUT - 5/8" N. C. hex.	2
45 92-	10	LOCKWASHER - 5/8" std.	2
46 A	38201	TURNBUCKLE - stabilizer chain	2

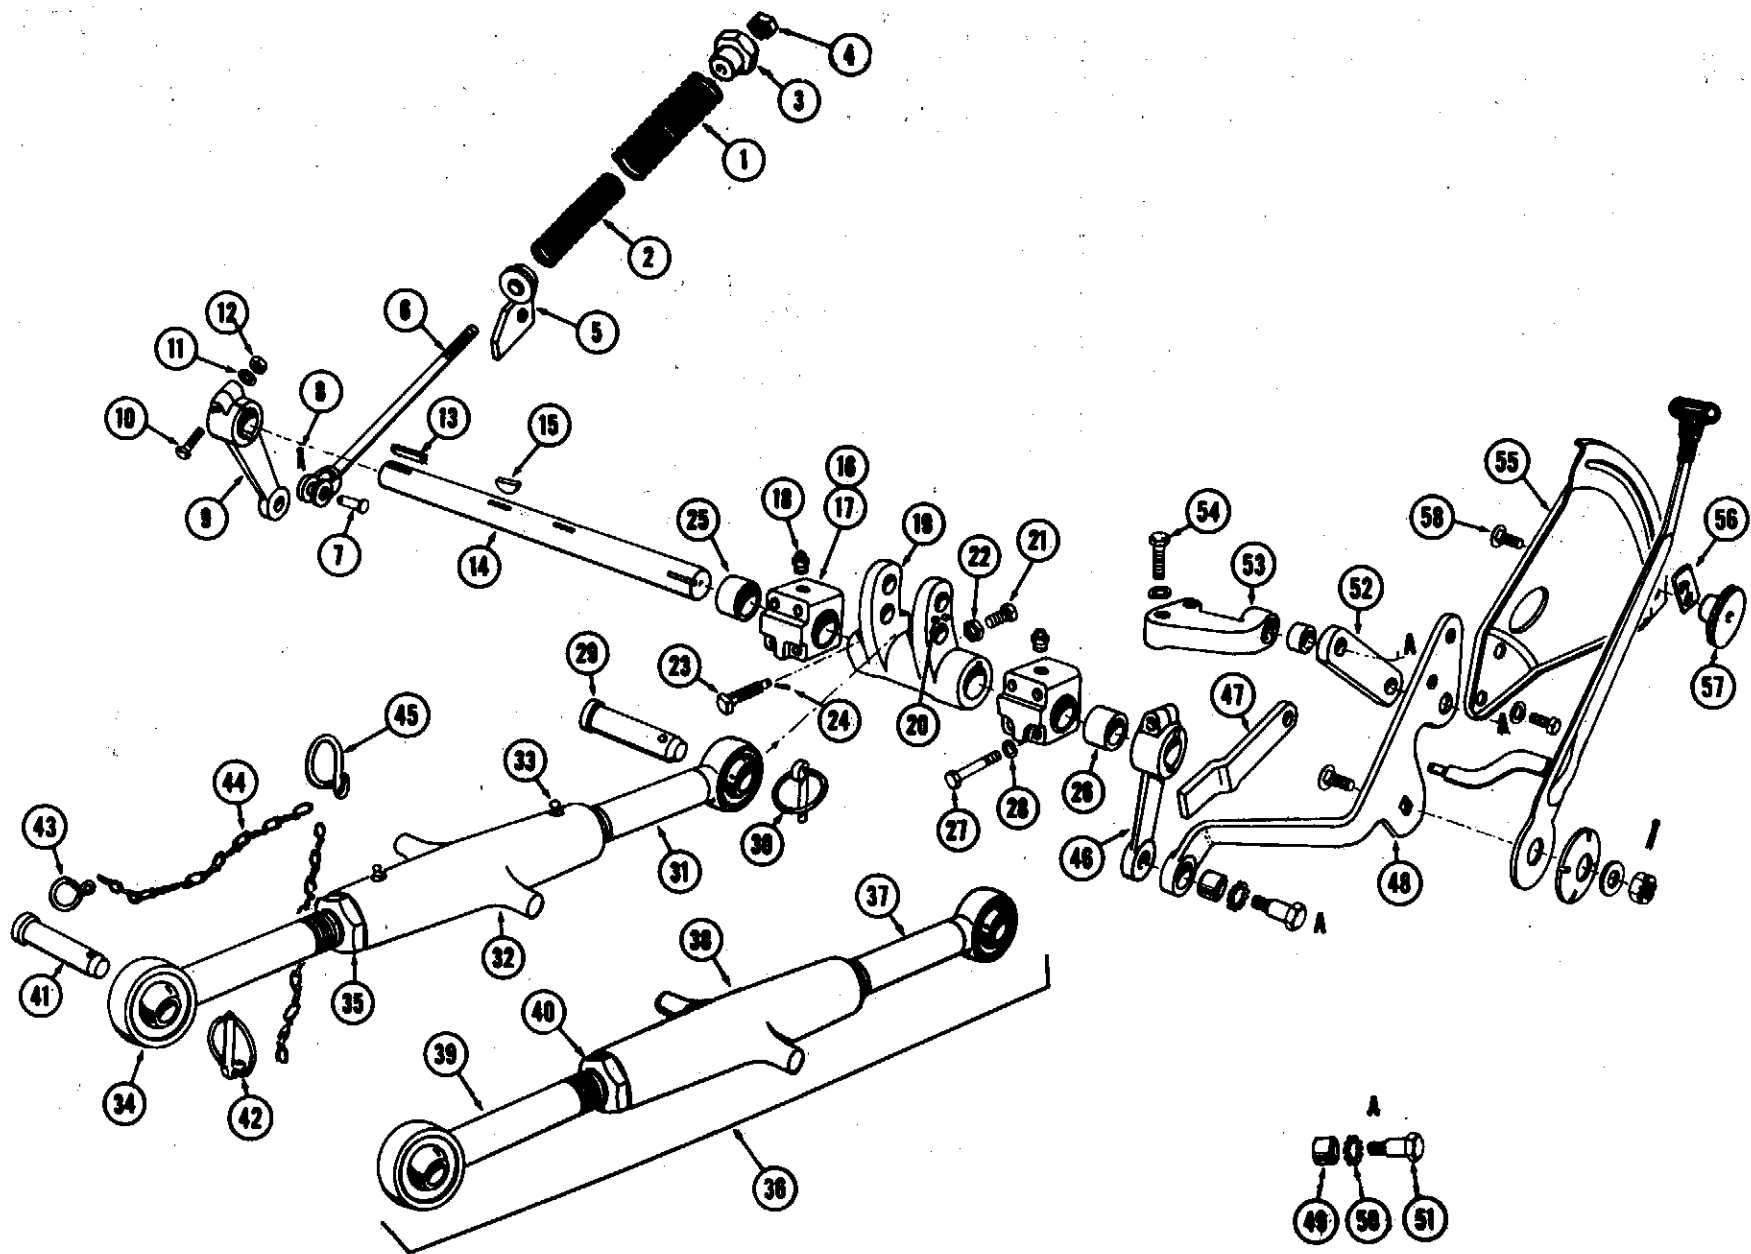

DRAFT-O-MATIC SENSING LINKAGE SCREW TYPE LOCK

REF.	PART NO.	DESCRIPTION	REQ'D
1	G 48519	SPRING - outer, sensing	1
2	A 35121	SPRING - inner, sensing	1
3	A 30829	NUT - spring adjusting	1
4	25- 148	NUT - jam, 1/2" N. C. hex.	1
5	A 38277	EYE - centering, sensing spring (Replaces A35496)	1
6	A 35495	ROD - adjusting spring	1
7	141- 6	PIN - yoke	1
8	132- 48	PIN - cotter, 1/8" x 1"	1
9	A 35795	ARM - sensing, L. H.	1
10	13- 632	BOLT - 3/8" x 2" N. C. hex. hd. (R. H. & L. H.)	2
11	92- 6	LOCKWASHER - 3/8" std.	2
12	25- 106	NUT - 3/8" N. C. hex.	2
13	A 36432	KEY - sensing arm to shaft	2
14	A 35493	SHAFT - pivot	1
15	126- 124	KEY - mast to shaft	2
16	A 36889	BRACKET - pivot shaft	2
17	A 35117	BUSHING	2
18	219- 1	FITTING - 1/8" str.	2
19	G 4527	BRACKET - mast, adj.link(See ref. 1 Page 123B)	1
20	138- 134	ROLL PIN - 1/4" x 1"	2
21	13- 620	BOLT - stop, 3/8" x 1-1/4" N.C. hex.hd.	1
22	25- 146	NUT - jam, 3/8" N. C. hex.	1
23	A 35119	BOLT - lock-out (See ref. 3 Page 123B)	1
24	138- 57	ROLL PIN - 1/8" x 3/4"	1
25	A 35494	SPACER - L. H. , pivot shaft (1-19/32")	1
26	G 49638	SPACER - R. H. , pvt. shaft (1-3/16" lg.)	1
27	13- 640	BOLT - pivot brkt.(3/8" x 2-1/2" N.C.)	8
28	92- 6	LOCKWASHER - 3/8" std.	8
29	G 16735	PIN - adjusting link to mast	1
30	A 30338	KLIK PIN	1
31	A 35792	LINK - (11-1/2") adjusting, frt. half (coarse thrd.)	1
31	G 14068	LINK - (8") adjusting, frt. half (coarse thrd.)	1
32	A 30379	TURNBUCKLE - (coarse thrd.) includes ref. 33	1
33	219- 14	FITTING - 1/4" str. drive	2
34	G 30583	LINK - adjusting, rear half (coarse thrd.)	1
35	25- 1418	NUT - jam, 1-1/8" N. C. hex.	1
36	A 36228	TURNBUCKLE ASSY. - (incl. 37, 38, 39 and 40)	1
37	A 36225	LINK - adjusting, front half (fine thrd.)	1
38	A 36223	TURNBUCKLE - (fine thrd.)	1
39	A 36226	LINK - adjusting, rear half (fine thrd.)	1
40	25- 1518	NUT - jam, 1-1/8" N. F. hex.	1
41	G 16735	PIN - mast, rear (Replaces A29700)	1
42	A 30338	KLIK PIN	1
43	A 30706	"S" HOOK - chain to pin	1
44	A 30672	CHAIN - mast pin	2
45	A 29730	"S" HOOK - chain to link	1
46	A 35794	ARM - sensing, R. H.	1
47	A 35498	STOP - quadrant arm	1
48	A 35499	ARM - lower, quadrant (incl. ref. 48)	1
49	A 35112	BUSHING - pivot	3
50	G 49413	WASHER - wave, pivot bolt	3
51	G 49088	BOLT - pivot	3
52	A 35502	LINK - quadrant arm to lift arm	1
53	A 35491	BRACKET - lift arm (incl. ref. 49)	1
54	13- 628	BOLT - 3/8" x 1-3/4" N. C. hex. hd.	2
55	A 35123	QUADRANT	1
	113- 204	BOLT - 3/8" x 1/2" N. C. hex. hd.	2
	192- 21	LOCKWASHER - 3/8" std.	2
56	G 15950	STOP - quadrant	1
57	G 15951	NUT - quadrant stop	2
58	111- 317	BOLT - 3/8" x 1" rd. hd. sq. neck	2

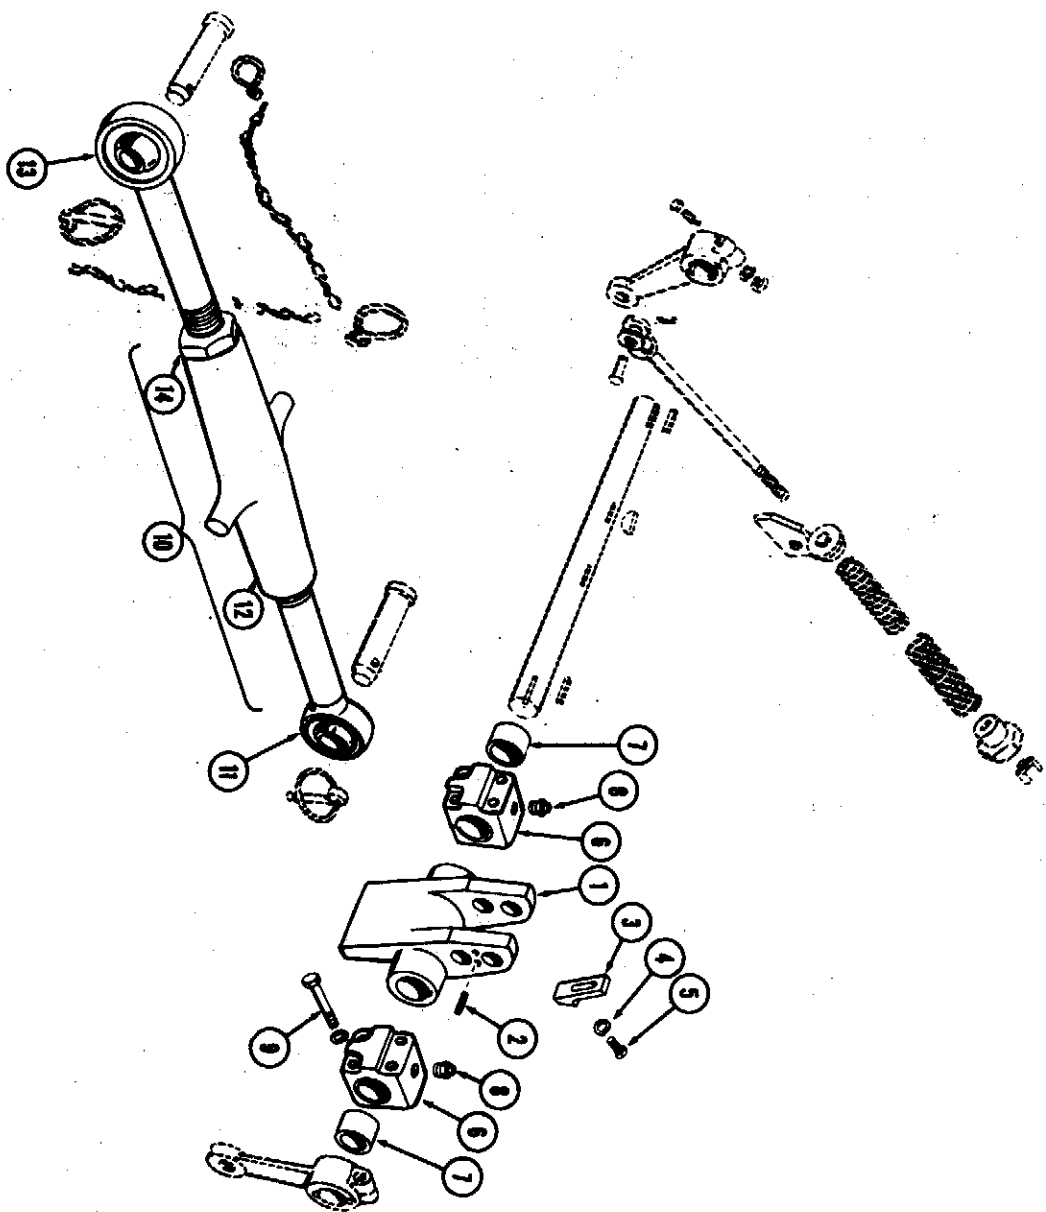


CASE 530 CONSTRUCTION KING TRACTOR

123B


SENSING LINKAGE LATCH TYPE LOCK

REF.	PART NO.	DESCRIPTION	REQ'D
1	A 36992	BRACKET - mast, adjusting link.....	1
2	138- 134	ROLL PIN - 1/4" x 1".....	2
3	A 36766	STOP - lock-out.....	1
4	195- 18	WASHER - 1/4" SAE plain.....	1
5	113- 9	BOLT - 1/4" x 7/8" N. C. hex. hd. (pltd.).....	1
6	A 36889	BRACKET - pivot shaft.....	2
7	A 35117	BUSHING - pivot.....	1
8	219- 1	FITTING - 1/8" str.....	2
9	13- 640	BOLT - 3/8" x 2-1/2" N. C. hex. hd.....	8
10	A 36228	TURNBUCKLE - adjusting (w/fine thread).....	1
11	A 36225	LINK - front half (w/fine thread).....	1
12	A 36223	TURNBUCKLE - (w/fine thread).....	1
13	A 36226	LINK - rear half (w/fine thread).....	1
14	25- 1518	NUT - jam, 1-1/8" N. F. hex.....	1

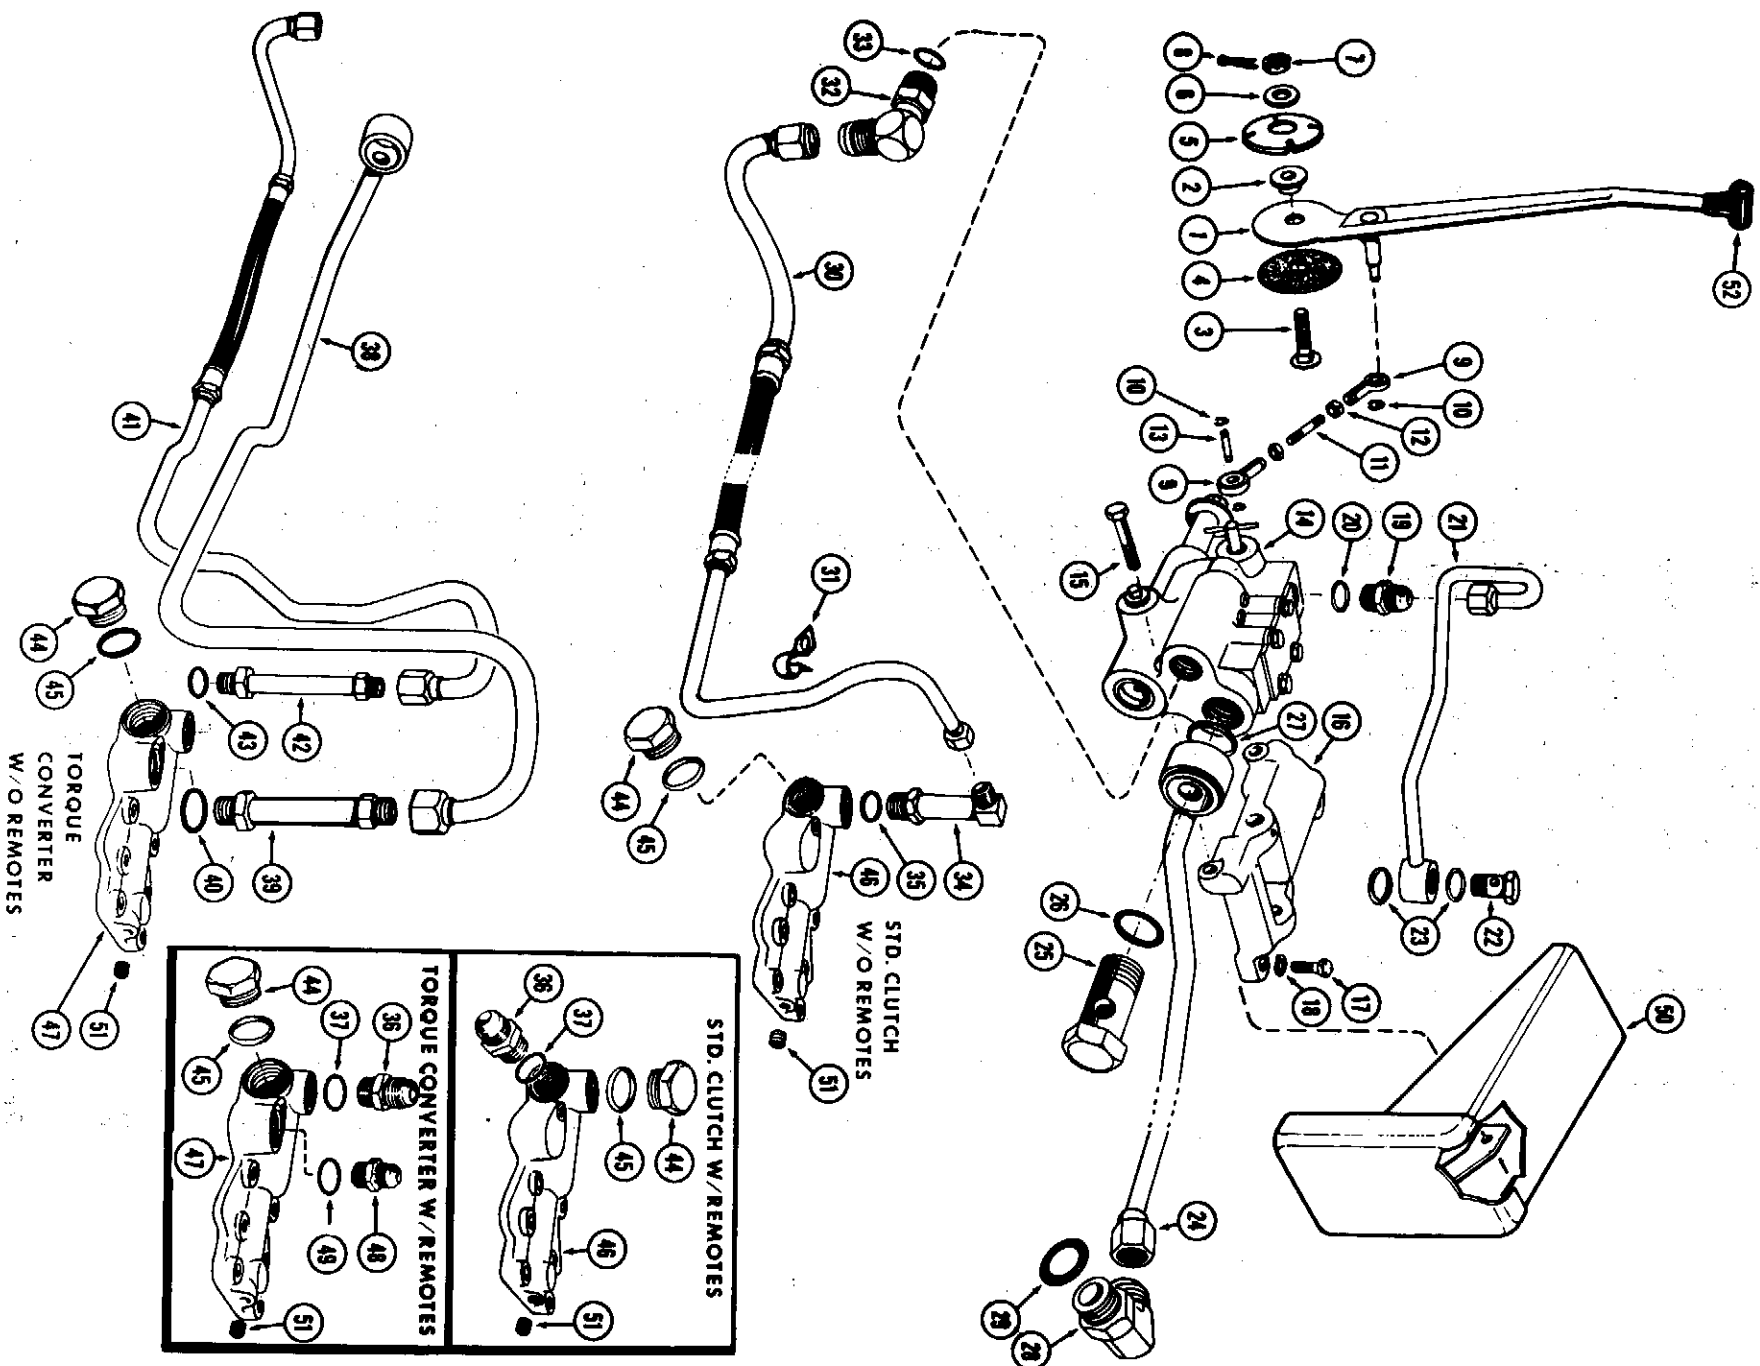


DRAFT-O-MATIC CONTROL AND VALVE

REF.	PART NO.	DESCRIPTION	REQ'D
1	A 35701	LEVER hand(incl.ref.2).	1
2	G 15947	BUSHING	1
3	G 49100	BOLT - hand lever	1
4	G 10786	DISC friction, hand lever	1
5	G 49412	WASHER spring	1
6	195-433	WASHER 1/2" plain	1
7	129-284	NUT slotted, 1/2" N.C. (7/16" thick)	1
8	132-27	PIN cotter, 3/32" x 7/8"	1
9	A 35134	EYE adjusting, lever to valve rod	2
10	A 27810	"E" RING - adjusting eye pin	3
11	A 35135	ROD hand lever to valve	1
12	25-155	NUT jam, 5/16" N.F. hex	2
13	A 35137	PIN eye to valve spool	1
14	A 35685	VALVE control (For repairs see Page 127).	1
15	13-552	BOLT 5/16" x 3-1/4" N.C. hex hd	2
	25-106	NUT 5/16" N.C. hex	2
	92-5	LOCKWASHER 5/16" std.	2
16	A 35478	BRACKET valve mounting	1
17	14- 632	BOLT - 3/8" x 2" N. F. hex. hd.	2
18	92-6	LOCKWASHER 3/8" std.	2
19	218-5059	CONNECTOR 1/2" x 3/4"-16 thrd. (incl.ref.20)	1
20	218-5006	"O" RING 1/2" tube	1
21	A 35507	TUBE valve to rockshaft housing	1
22	A 35146	SCREW tube to rockshaft housing	1
23	F 62114	"O" RING - tube to rockshaft housing	1
24	A 35490	TUBE - return(w/std. drive)	1
25	A 35553	SCREW return tube to valve	1
26	A 29456	"O" RING - outer (1-1/16" O. D.)	1
27	A 27577	"O" RING - inner (1-1/4" O. D.)	1
28	218-5108	ELBOW return tube (incl. ref.29)	1
29	218-5008	"O" RING 3/4" tube	1
30	A 35489	TUBE pressure(w/std.drive)	1
31	A 35142	CLAMP pressure tube to torque tube	1
32	A 37067	ELBOW - pressure tube (incl. ref. 33)	1
33	218-5007	"O" RING 5/8" tube	1
34	D 23143	ELBOW pressure tube to cover(std.dr.v.w/o remote controls)incl.ref.35)	1
35	218-5007	"O" RING 5/8" tube	1
36	218-5062	CONNECTOR pressure tube to cover(w/remote)	1
37	218-5007	"O" RING 5/8" tube	1
38	A 35551	TUBE return(w/torque converter drive)	1
39	A 35446	CONNECTOR return tube to cover(torque conv. drive w/o remote controls)incl. ref.40.	1
40	218-5008	"O" RING 3/4" tube	1
41	A 35520	TUBE pressure(w/torque conv.drive)	1
42	A 35444	CONNECTOR pressure tube to cover(torque conv.dr.v.w/o remote controls)incl.ref.43	1
43	218-5007	"O" RING 5/8" tube	1
44	218-5157	PLUG 7/8" -14 thrd. (incl.ref.45)	1
45	218-5007	"O" RING - 5/8" tube	1
46	A 35425	COVER (w/standard drive)	1
47	A 35443	COVER (w/converter drive)	1
48	218-5064	CONNECTOR - return to cover(w/remote)	1
49	218-5008	"O" RING - 3/4" tube	1
50	A 36515	SHIELD - valve	1
51	221- 1849	PLUG - 3/8" socket hd.	1
52	A 36509	KNOB - hand lever	1
	138- 127	PIN - roll	1

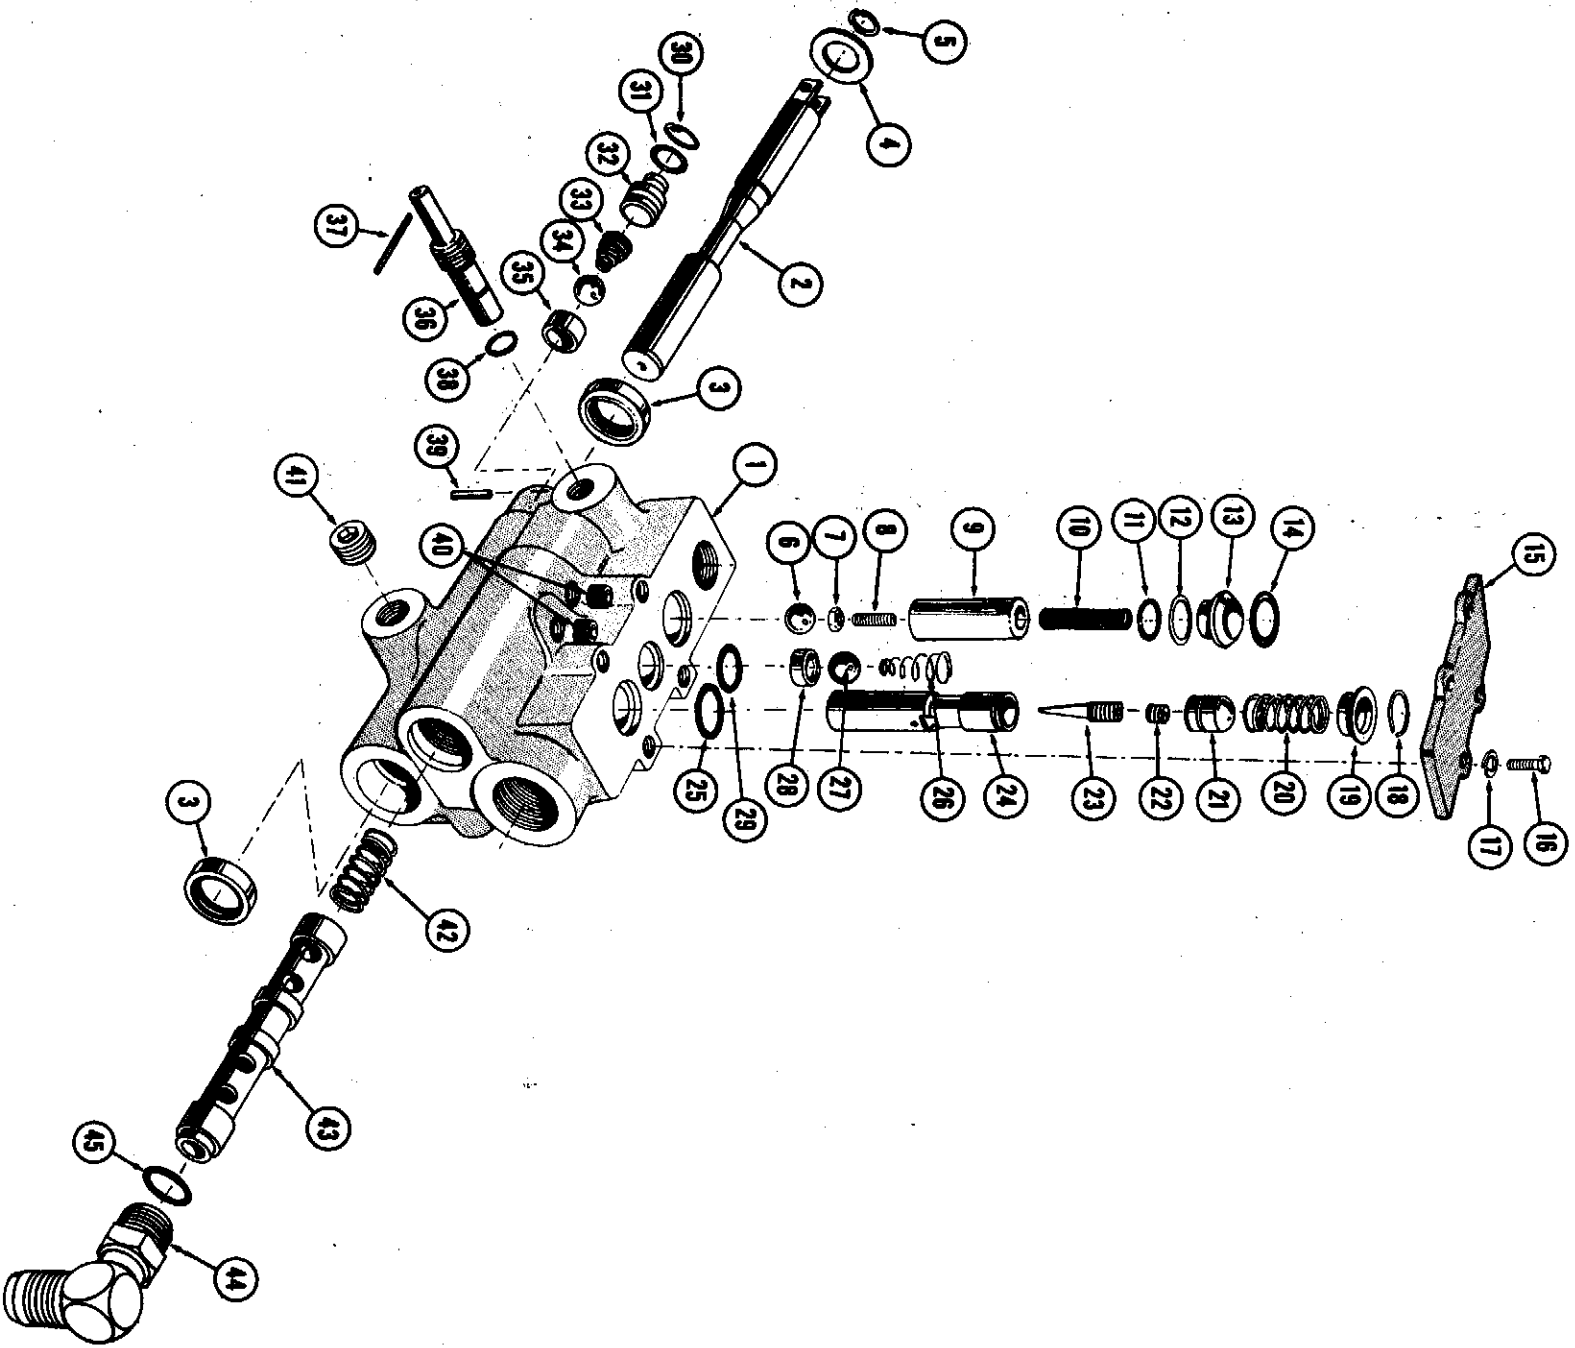


PARTS FOR A35685 CONTROL VALVE

REF.	PART NO.	DESCRIPTION	REQ'D
1	NBS	BODY - (Order A35685).	1
2	A 35092	SPOOL.	1
3	A 11607	OIL SEAL spool.	2
4	A 35093	WASHER spool stop	1
5	A 35094	SNAP RING spool stop washer	1
6	A 211-13	BALL lowering piston(1/2"dia.)	1
7	A 35102	NUT set screw, lowering piston	1
8	A 35101	SET SCREW lowering piston	1
9	A 35695	PISTON lowering	1
10	A 35103	SPRING lowering piston	1
11	A 27385	"O" RING - lowering piston	1
12	A 35698	RING back-up, lowering piston	1
13	A 35696	SLEEVE lowering piston	1
14	A 35104	"O" RING - sleeve (Replaces A35697).	1
15	A 35105	COVER valve	1
16	13-512	BOLT 5/16" x 3/4" N.C. hex. hd.	4
17	92-5	LOCKWASHER 5/16" std.	4
18	A 35690	SNAP RING open center poppet.	1
19	A 35689	RETAINER.	1
20	A 35691	SPRING trigger valve	1
21	A 35097	PLUG open ctr. poppet.	1
22	A 35785	SET SCREW needle valve	1
23	A 35784	VALVE needle.	1
24	A 36434	POCKET - open center (incl. ref. 16, 21, 22&23).	1
25	A 35548	GASKET open center poppet.	1
26	A 35099	SPRING load check.	1
27	A 211-12	BALL load check(7/16" dia.)	1
28	L 10120	SEAT - ball.	1
29	A 35547	GASKET load check opening.	1
30	A 35694	SNAP RING choke plug	1
31	A 27410	"O" RING - check plug.	1
32	A 35693	PLUG check	1
33	A 35098	SPRING check.	1
34	A 211-12	BALL check (7/16" dia.)	1
35	L 10120	SEAT - ball.	1
36	A 35106	SPOOL throttle	1
37	A 138-65	ROLL PIN throttle spool, 1/8" x 1-1/2".	1
38	A 30825	"O" RING - throttle spool	1
39	138-39	ROLL PIN - throttle spool, 3/32" x 5/8".	1
40	A 221-849	PLUG pipe, 1/8" hex. socket hd.	2
41	A 221-843	PLUG pipe, 3/8" hex. sockt. hd.	1
42	A 35700	SPRING flow regulator	1
43	A 35699	PISTON flow regulator	1
44	A 37067	ELBOW - pressure line to valve	1
45	A 218-5007	"O" RING - elbow to valve	1

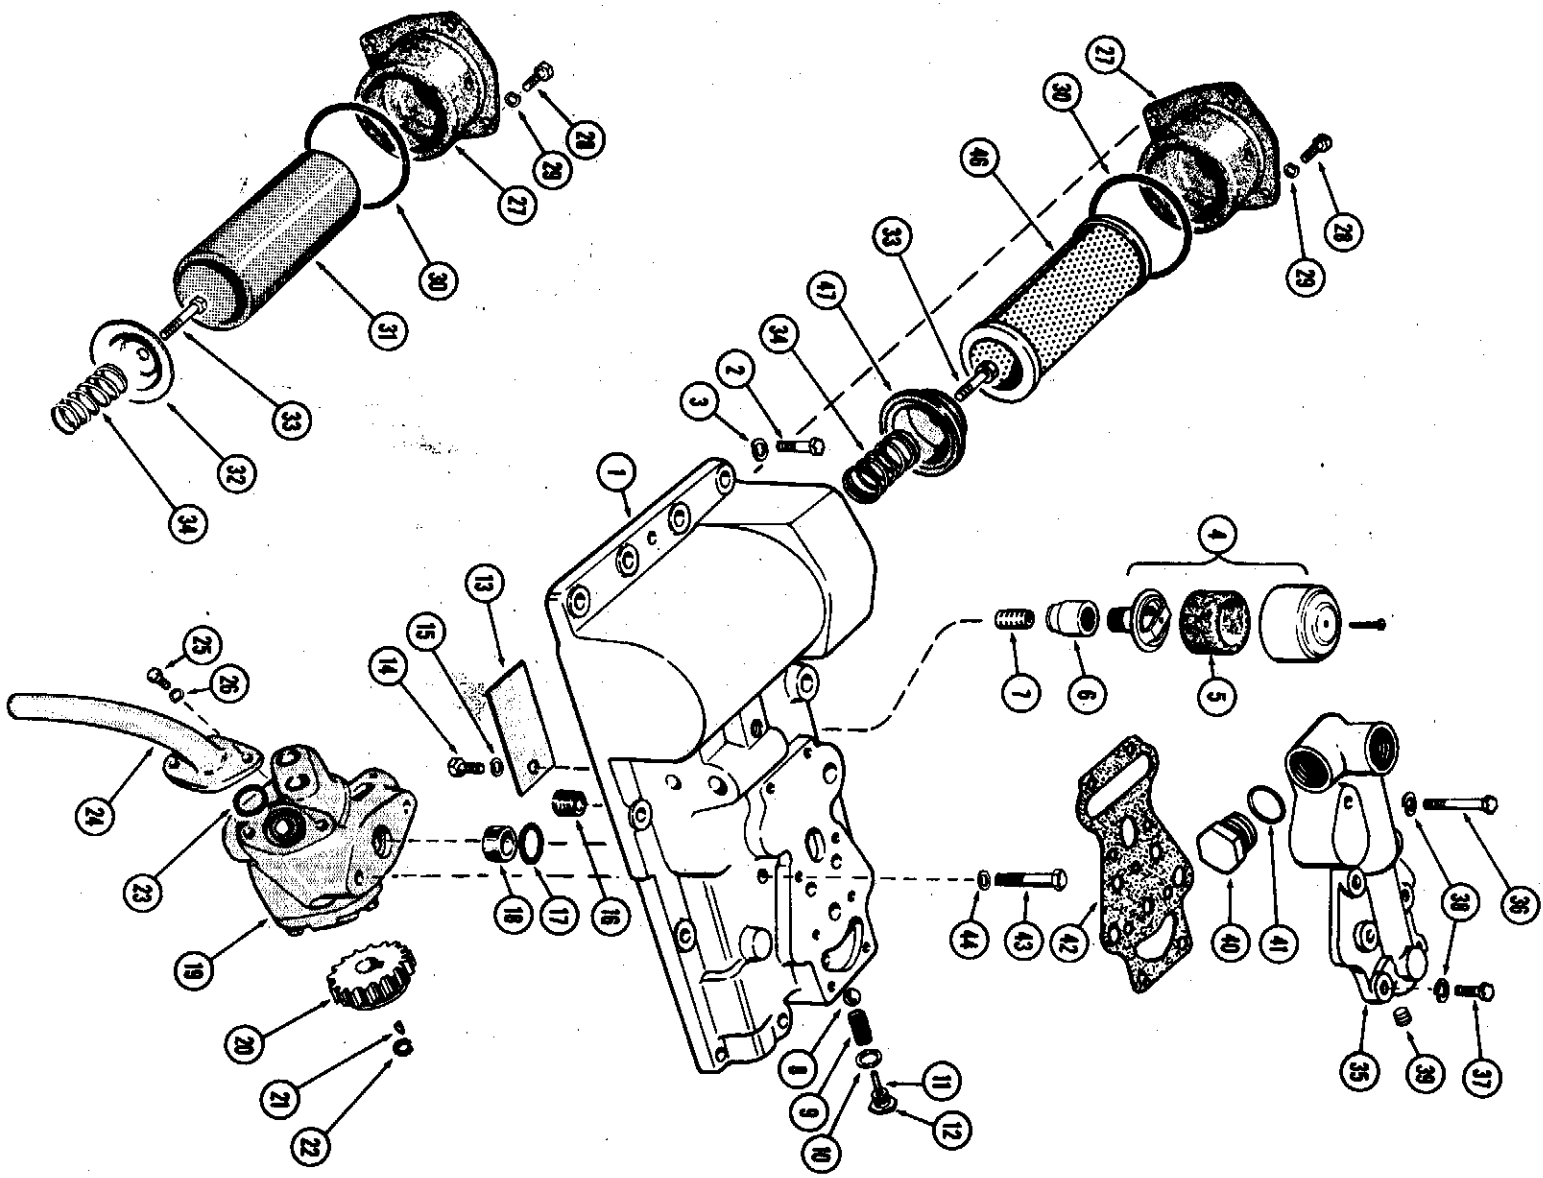



HYDRAULIC PUMP AND ADAPTER
STANDARD DRIVE

REF.	PART NO.	DESCRIPTION	REQ'D
1 A	35424	HOUSING - adapter, hydraulic (Order 1-A37790, 1-G10349 & 1-G10351)	1
2	13- 616	BOLT - 3/8" x 1" N. C. hex. hd.	9
2	13- 628	BOLT - 3/8" x 1-3/4" N. C. hex. hd.	2
3	92- 6	LOCKWASHER - 3/8" std.	11
4	A 9238	BREATHER - oil (includes ref. 5).	1
5	A 10059	ELEMENT - filter, oil breather	1
6	221- 731	COUPLING - reducing, 3/4" x 1/2"	1
7	221- 130	NIPPLE - pipe, 1/4" P. T. x 7/8" long	1
8	211- 14	BALL - drop check valve (9/16" dia.)	1
9	A 35427	SPRING - drop check valve.	1
10	G 10964	GASKET - plug, drop check valve	1
11	138- 106	ROLL PIN - drop check valve, 3/16" x 2-1/2"	1
12	A 14280	PLUG - drop check valve	1
13	G 10922	BAFFLE - oil	1
14	13- 48	BOLT - 1/4" x 1/2" N. C. hex. hd.	1
15	92- 4	LOCKWASHER - 1/4" std.	1
16	221- 32	PLUG - pipe, 3/8" sq. socket hd. (short).	1
17	A 7623	"O" RING - pump to adapter	1
18	G 10929	BUSHING - dowel, pump to adapter	1
19	A 35081	PUMP - hydraulic.	1
20	A 35082	GEAR - pump drive	1
21	126- 11	KEY - #5 Woodruff	1
22	G 46176	SNAP RING - gear to pump.	1
23	A 27352	"O" RING - suction tube to pump	1
24	A 35213	TUBE - suction, pump	1
25	13- 512	BOLT - 5/16" x 3/4" N. C. hex. hd.	2
26	92- 5	LOCKWASHER - 5/16" std.	2
27	A 35108	CAP - cover, oil filter.	1
28	13- 512	BOLT - 5/16" x 3/4" N. C. hex. hd.	4
29	92- 5	LOCKWASHER - 5/16" std.	4
30	A 30095	"O" RING - cap to housing	1
31	G 13113	ELEMENT - filter, fiber tube (Order ref. 46 and 47).	1
32	A 29236	CAP - retainer (w/fiber type element)(See ref. 47).	1
33	13- 428	BOLT - 1/4" x 1-3/4" N. C. hex. hd.	1
34	A 29993	SPRING - retainer, filter element	1
35	A 35425	COVER - valve or housing (w/Draft-O-Matic)	1
36	13- 528	BOLT - 5/16" x 1-3/4" N. C. hex. hd.	1
37	13- 520	BOLT - 5/16" x 1-1/4" N. C. hex. hd.	7
38	92- 5	LOCKWASHER - 5/16" std.	8
39	221- 1849	PLUG - pipe, 1/8" socket hd.	1
40	218- 5157	PLUG - 5/8" O. D. (includes ref. 41).	1
41	218- 5007	"O" RING - plug to cover	1
42	A 35617	GASKET - cover	1
43	165- 116	SCREW - pump to housing, 5/16" x 2" socket hd.	2
44	92- 7	LOCKWASHER - 7/16" std.	2
46	A 36524	ELEMENT - filter, hydraulic oil (metal type)	1
47	A 36523	CAP - retainer, filter element (metal type)	1

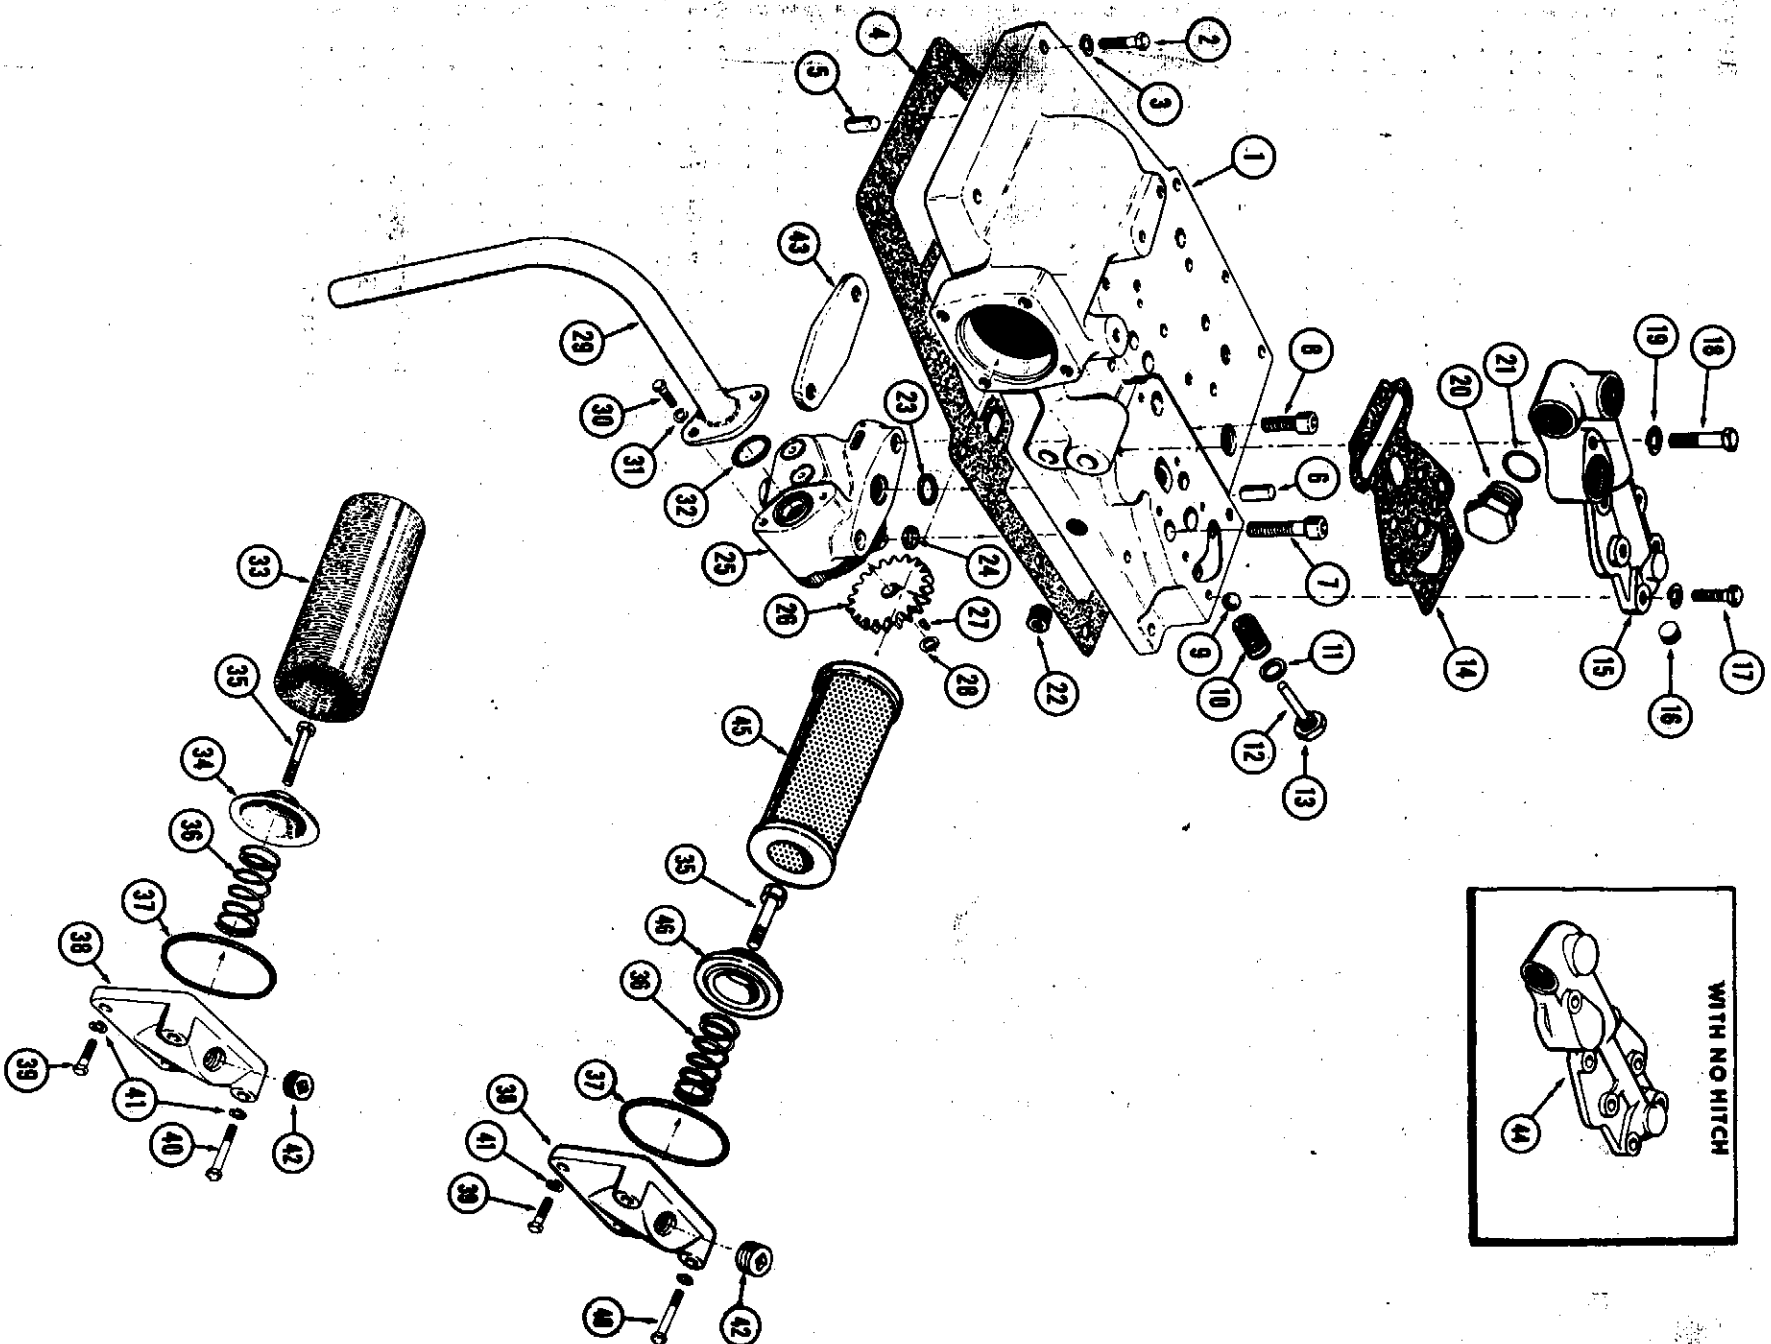

HYDRAULIC PUMP AND ADAPTER TORQUE CONVERTER DRIVE

REF.	PART NO.	DESCRIPTION	REQD
1 A	37869	HOUSING - adapter, hydraulic.	1
2 13-	618	BOLT - 3/8" x 1-1/8" N.C. hex. hd.	1
2 13-	624	BOLT - 3/8" x 1-1/2" N.C. hex. hd.	1
2 13-	626	BOLT - 3/8" x 1-5/8" N.C. hex. hd.	5
3 92-	6	LOCKWASHER - 3/8" std.	7
4 G	46818	GASKET - adapter housing.	1
5 G	10711	PIN - dowel, adapter housing rear.	1
6 A	29426	PIN - dowel, adapter housing front.	1
7 165-	104	SCREW - 7/16" x 1-3/4" socket hd. self-locking.	1
8 165-	106	SCREW - 7/16" x 1" socket hd. self-locking.	1
9 211-	13	BALL - drop check valve (1/2" dia.)	1
10 A	35442	SPRING - drop check valve.	1
11 G	10964	GASKET - plug, drop check valve.	1
12 138-	106	ROLL PIN - drop check valve, 3/16" x 2-1/2".	1
13 A	14280	PLUG - drop check valve.	1
14 A	35617	GASKET - cover.	1
15 A	35443	COVER - valve or housing (w/Draft-O-Matic).	1
16 221-	1849	PLUG - pipe, 1/8" hex. socket hd.	1
17 13-	520	BOLT - 5/16" x 1-1/4" N.C. hex. hd.	7
18 13-	528	BOLT - 5/16" x 1-3/4" N.C. hex. hd.	1
19 92-	5	LOCKWASHERS - 5/16" std.	8
20 218-	5157	PLUG - 5/8" O. D. (includes ref. 21).	1
21 218-	5007	"O" RING - plug to cover.	1
22 221-	32	PLUG - pipe, 3/8" hex. socket hd. (short).	1
23 A	27365	"O" RING - pump to adapter.	1
24 G	16785	RING - dowel, pump to adapter.	2
25 G	45460	PUMP - hydraulic.	1
26 G	16797	GEAR - pump drive.	1
27 126-	11	KEY - #5 Woodruff.	1
28 G	46176	SNAP RING - gear to pump.	1
29 A	35210	TUBE - suction, pump.	1
30 13-	516	BOLT - 5/16" x 1" N.C. hex. hd.	2
31 92-	5	LOCKWASHER - 5/16" std.	2
32 A	27352	"O" RING - suction tube to pump.	1
33 G	13113	ELEMENT - filter, fiber type (Order ref. 45 and 46).	1
34 A	29236	CAP - retainer, (w/fiber type filter) (See ref. 46).	1
35 13-	428	BOLT - 1/4" x 1-3/4" N.C. hex. hd.	1
36 A	29993	SPRING - retainer, filter element.	1
37 A	29884	"O" RING - filter cap.	1
38 G	1353	CAP - cover, oil filter.	1
39 13-	616	BOLT - 3/8" x 1" N.C. hex. hd.	2
40 13-	636	BOLT - 3/8" x 2-1/4" N.C. hex. hd.	2
41 92-	6	LOCKWASHER - 3/8" std.	4
42 221-	845	PLUG - pipe, 3/4" hex. socket hd.	1
43 G	16830	COVER - pump to opening (without hydraulic pump).	1
44 A	35440	COVER - valve or housing (w/o Draft-O-Matic).	1
45 A	36524	ELEMENT - filter (metal type).	1
46 A	36523	CAP - retainer, filter element, metal type.	1

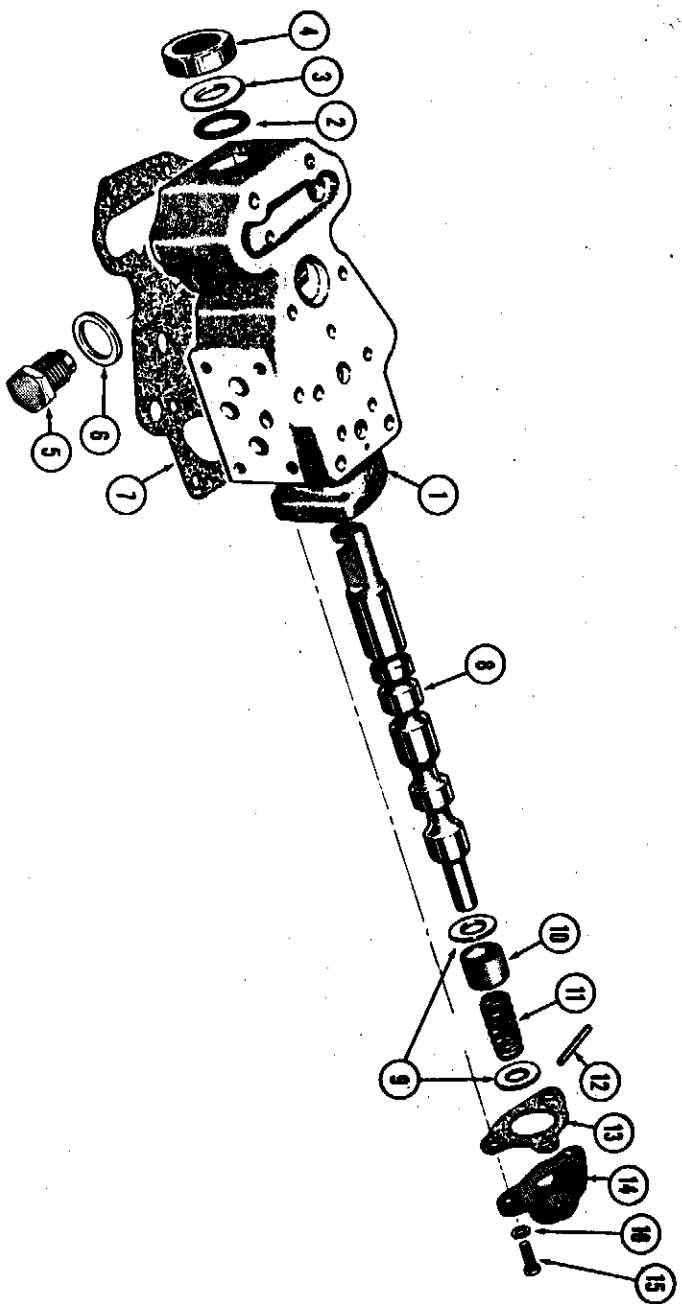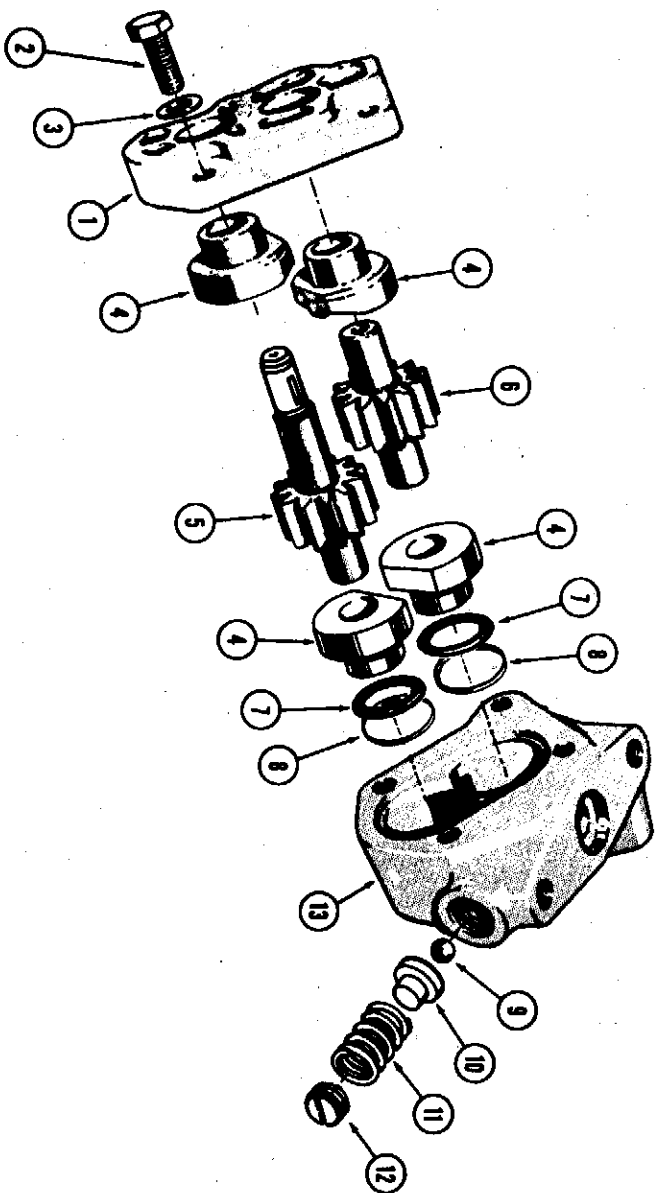


PARTS FOR A35081 AND G45460 PUMP

REF.	PART NO.	DESCRIPTION	REQ'D
1	4523	COVER	1
2	49085	BOLT cover	4
3	92-6	LOCKWASHER 3/8" std	4
4	49673	BEARING gear	4
5	46223	GEAR drive	1
6	46049	GEAR driven.	1
7	46808	"O" RING bearing seal	2
8	49637	RING - back-up.	2
9	211-10	BALL relief valve(11/32"dia.)	1
10	36058	RETAINER ball,relief valve(includes ball)	1
11	48516	SPRING relief valve	1
12	49094	PLUG adjusting, relief valve	1
13	NSS	BODY (Order A35081 or G45460)	1


PARTS FOR A35618 CONTROL VALVE

1	A	35435	BODY	1
2	A	27352	"O" RING	1
3	G	49403	WASHER retainer, "O" ring.	1
4	G	13807	OIL SEAL.	1
5	G	10902	PLUG opening.	1
6	A	31053	GASKET - plug	1
7	A	35617	GASKET valve body	1
8	A	35436	SPOOL.	1
9	A	35302	WASHER spool	2
10	G	10901	SLEEVE stop, spool spring	1
11	A	30083	SPRING - valve spool	1
12		138-57	ROLL PIN 1/8" x 3/4"	1
13	G	10903	GASKET end cap	1
14	G	1102	CAP end.	1
15		13-412	BOLT 1/4" x 3/4" N.C. hex hd.	3
16		92-4	LOCKWASHER 1/4" std	3

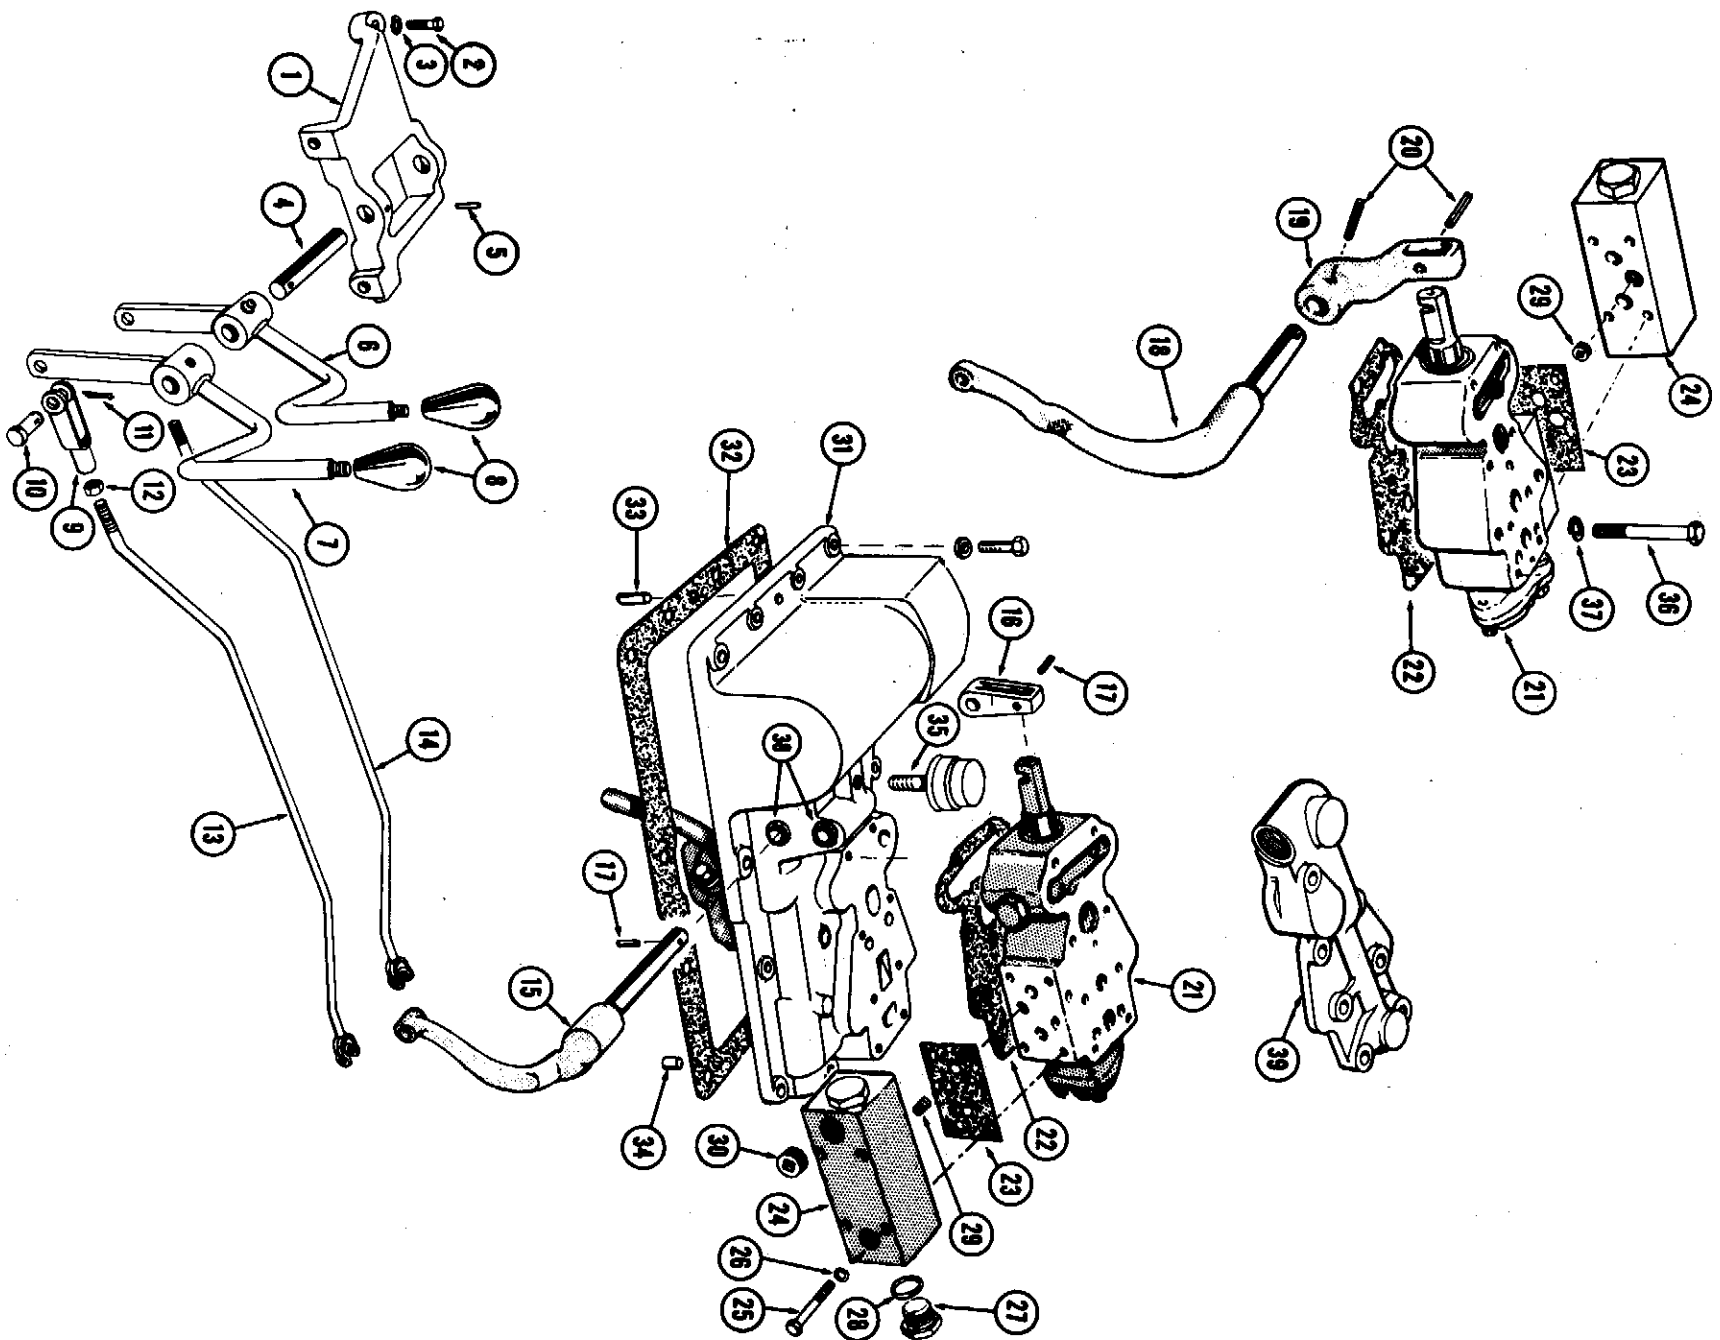


REMOTE HYDRAULIC CONTROLS STANDARD CLUTCH

REF.	PART NO.	DESCRIPTION	REQ'D
1 A	35478	BRACKET mounting, hand lever	1
2	16-632	BOLT 3/8" x 2" N.C. hex. hd.	2
3	92-6	LOCKWASHER 3/8" std.	2
4 A	35488	SHAFT pivot, hand lever	1
5	138-136	ROLL PIN 1/4" x 1-1/4"	1
6 A	35481	LEVER - hand, inner.	1
7 A	35485	LEVER - hand, outer.	1
8 A	219-14	FITTING 1/4" str. drive.	2
9	14051	KNOB hand lever.	2
10	213-4	YOKE rod to lever.	2
11	141-4	PIN - yoke	2
12	132-26	PIN cotter, 3/32" x 3/4"	2
13 A	25-116	NUT 3/8" N F. hex.	2
14 A	35480	ROD control, outer (upper valve)	1
15 G	35479	ROD control, inner (lower valve)	1
16 G	30632	CRANK inner control rod to lower valve	1
17	1108	BELLCRANK lower valve spool	1
18 G	138-134	ROLL PIN 1/4" x 1"	2
19 G	30634	CRANK outer control rod to upper valve	1
20	1107	BELLCRANK upper valve spool	1
21 A	138-134	ROLL PIN 1/4" x 1"	2
22 A	35618	VALVE control	2
23 G	35617	GASKET - valve	3
24 A	10930	GASKET manifold to valve.	2
25	35437	MANIFOLD valve.	2
26	13-540	BOLT 5/16" x 2-1/2" N.C. hex. hd.	6
27 A	13-538	BOLT 5/16" x 2-3/8" N.C. hex. hd.	2
28 A	92-5	LOCKWASHER 5/16" std.	8
29 A	14280	PLUG end manifold	4
30 A	27927	PLUG - plug.	4
31 A	30031	PLUG - pipe, manifold inner.	2
32 G	221-843	PLUG pipe, lower manifold outer	2
33 G	35424	HOUSING - adapter, hydraulic (Order 1-A37790, 1-G10349 & 1-G10351)	1
34 A	10876	GASKET adapter housing.	1
35 A	10711	PIN dowel, adapter housing rear.	1
36	29426	PIN - dowel, adapter housing front	1
37	27173	BREATHER - oil	1
38 A	13-584	BOLT valve, 5/16" x 5-1/4" N.C. hex. hd.	7
39 A	13-592	BOLT valve, 5/16" x 5-3/4" N.C. hex. hd.	1
	92-5	LOCKWASHER 5/16" std.	8
	35428	BUSHING crank	4
	35440	COVER - valve (w/o Draft-O-Matic)	1

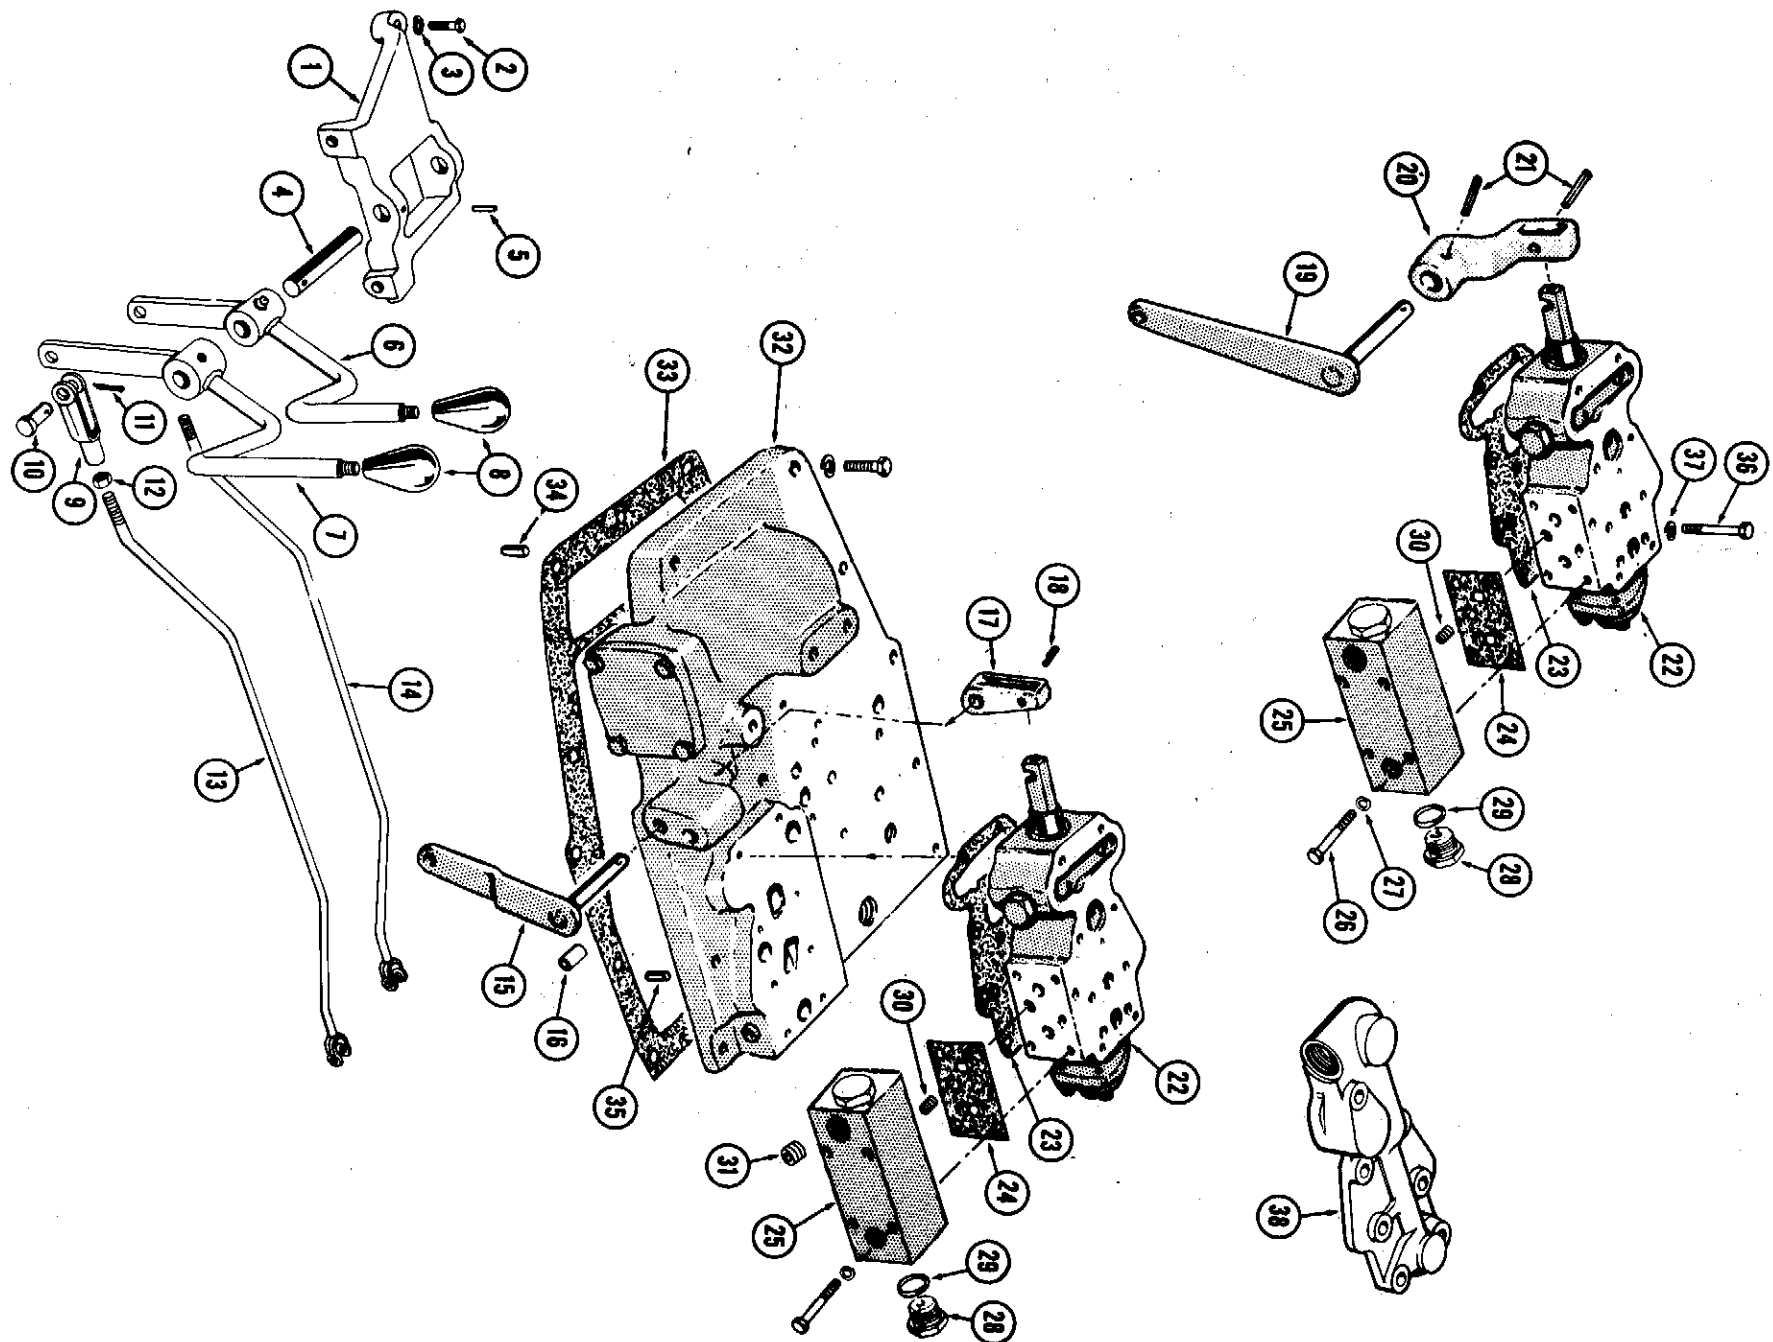

REMOTE HYDRAULIC CONTROLS TORQUE CONVERTER DRIVE

REF.	PART NO.	DESCRIPTION	REQD
1	A 35478	BRACKET mounting, hand lever	1
2	16-632	BOLT 3/8" x 2" N.C. hex hd.	2
3	92-6	LOCKWASHER 3/8" std.	2
4	A 35488	SHAFT pivot, hand lever.	1
5	138-136	ROLL PIN 1/4" x 1-1/4"	1
6	A 35481	LEVER hand, inner	1
7	A 35485	LEVER hand, outer	1
8	219-14	FTTING 1/4" str. drive	2
9	A 14051	KNOB hand lever.	2
10	213-4	YOKE rod to lever.	2
11	141-4	PIN - yoke	2
12	132-26	PIN cotter, 3/32" x 3/4"	2
13	25-116	NUIT 3/8" N F hex	2
14	A 35480	ROD control, outer(upper valve)	1
15	A 35479	ROD control, inner(lower valve)	1
16	A 35448	CRANK inner control rod to lower valve	1
17	A 35428	BUSHING crank.	4
18	G 1108	BELICRANK lower valve spool	1
19	138-134	ROLL PIN 1/4" x 1"	2
20	A 35449	CRANK outer control rod to upper valve	1
21	G 1107	BELICRANK upper valve spool	1
22	138-134	ROLL PIN 1/4" x 1"	2
23	A 35618	VALVE control	2
24	A 35617	GASKET - valve	3
25	G 10930	GASKET manifold to valve.	2
26	A 35437	MANIFOLD valve.	2
27	13-540	BOLT 5/16" x 2-1/2" N.C. hex hd.	6
28	92-5	BOLT 5/16" x 2-3/8" N C hex hd	2
29	14280	LOCKWASHER 5/16" std.	8
30	A 27927	PLUG end, manifold.	4
31	30031	GASKET - end plug.	4
32	221-843	PLUG - pipe, manifold inner.	2
33	A 37869	PLUG pipe, lower manifold outer port.	2
34	G 46818	HOUSING - adapter, (Replaces A35441).	1
35	G 10711	GASKET adapter housing.	1
36	A 29426	PIN dowel, adapter hsg rear	1
37	13-584	PIN - dowel, adapter housing front	1
38	13-592	BOLT valve, 5/16" x 5-1/4" N.C. hex hd.	7
	92-5	BOLT valve, 5/16" x 5-3/4" N.C. hex hd.	1
	A 35440	LOCKWASHER 5/16" std.	8
		COVER valve(w/o Draft-O-Matic).	1

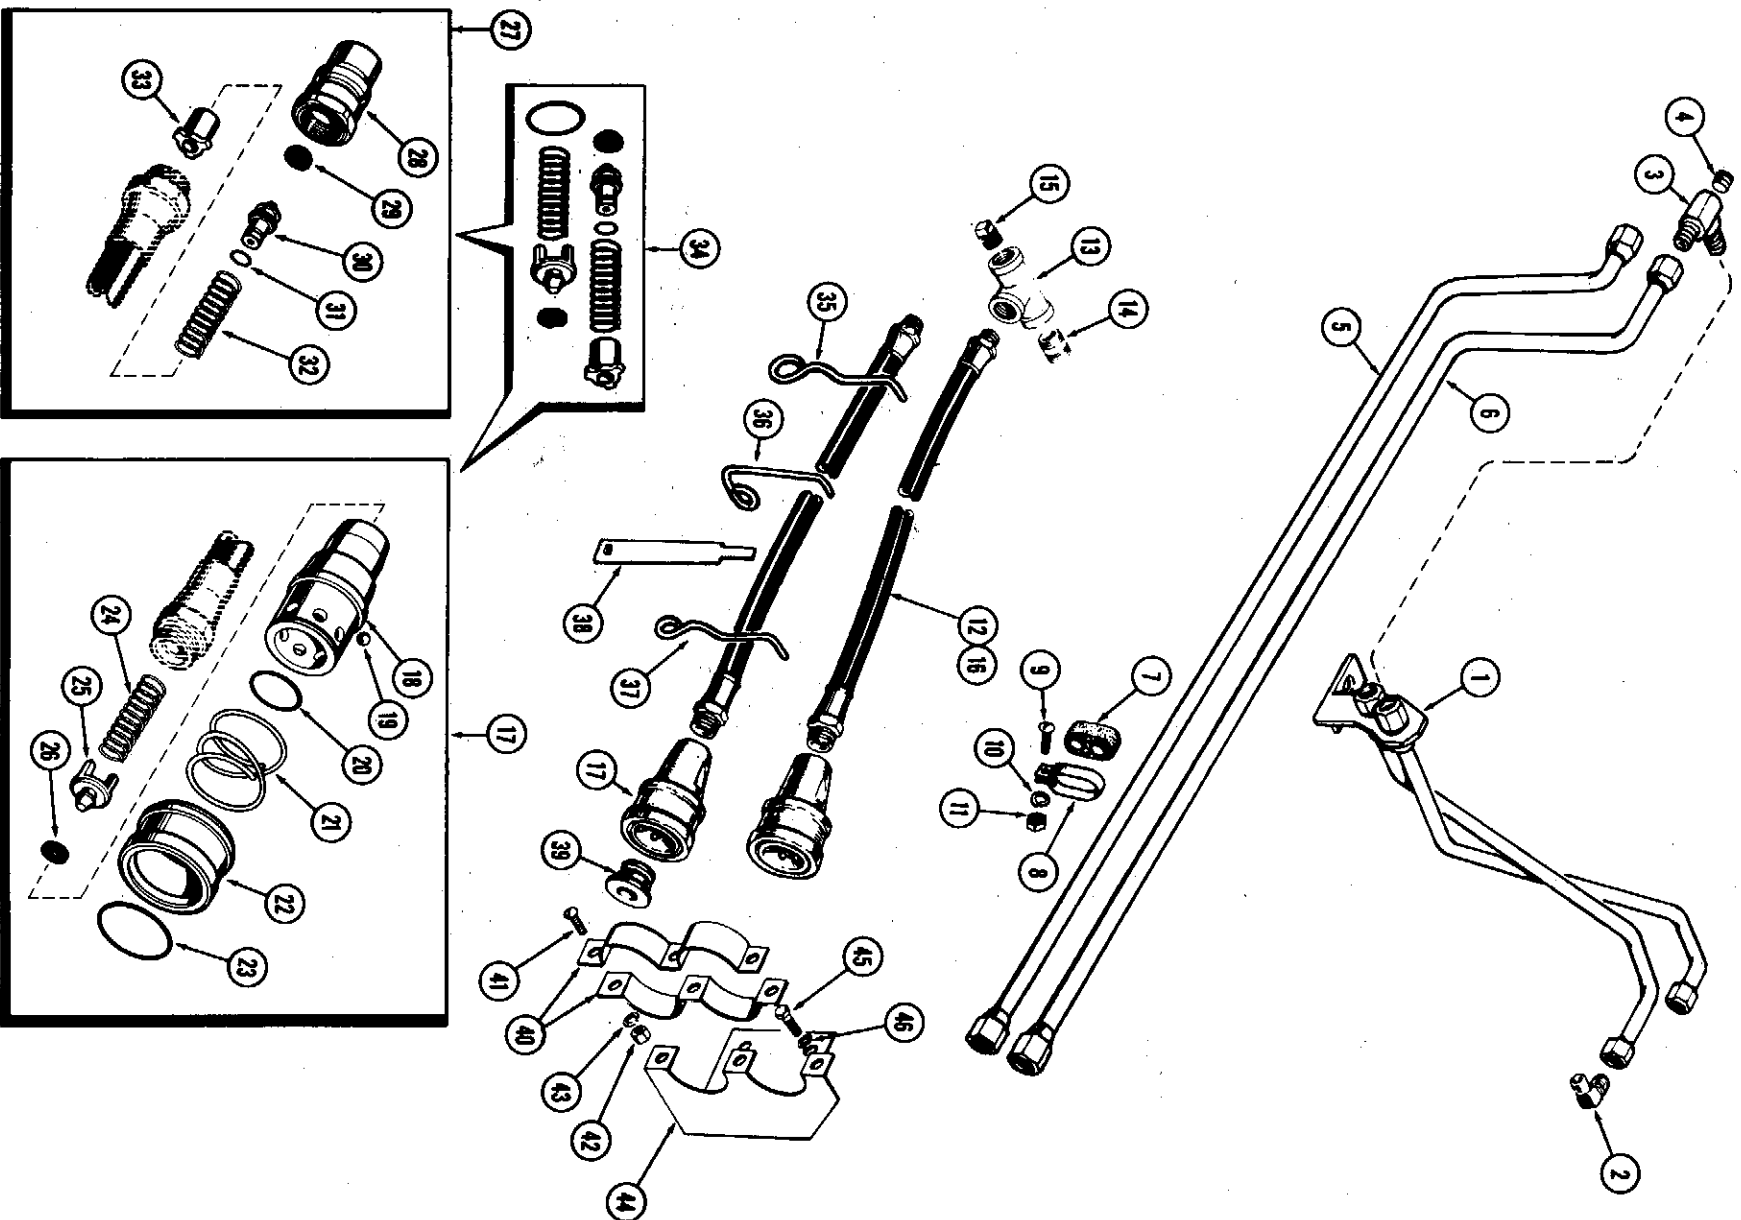

HYDRAULIC FRONT HOSE AND COUPLINGS

REF.	PART NO.	DESCRIPTION	REQD
1	A 35612	MANIFOLD - cross-over (w/torque conv.).	1
2	218- 484	ELBOW - tube to valve (w/torque converter).	2
3	A 35607	TEE - cross-over (w/torque conv.).	2
4	221- 1483	PLUG - tee fitting (w/torque conv.).	2
5	A 35720	TUBE - lower (w/torque conv.).	1
6	A 35719	TUBE - upper (w/torque conv.).	1
7	G 46835	GROMMET - rubber, tube clamp	1
8	G 46194	CLAMP - tube	1
9	173- 24	SCREW - #10-32 x 3/4" rd. hd.	1
10	92- 3	LOCKWASHER - 3/16" std.	1
11	129- 17	NUT - #10-32 hex.	1
12	A 35453	HOSE - tube to coupling (22") (w/torque conv.).	2
13	221- 423	TEE - hose to valve (w/std. clutch).	2
14	221- 160	NIPPLE - 3/8" P. T. x 1-3/8" (w/std. drive).	2
15	221- 1843	PLUG - 3/8" P. T. socket hd. (w/std. clutch).	2
16	A 35438	HOSE - valve to coupling (62") (w/std. clutch).	2
17	A 28542	SOCKET - break-away coupling.	2
18	A 27349	BODY	1
19	211- 7	BALL - locking.	8
20	A 34848	"O" RING - body	1
21	A 27354	SPRING - ball sleeve	1
22	A 27353	SLEEVE - ball retainer.	1
23	A 27355	"O" RING - sleeve	1
24	A 11324	SPRING - piston.	1
25	A 26215	PISTON	1
26	A 33964	SEAL - piston.	1
27	A 28541	PLUG ASSY. - break-away coupling.	1
28	A 27356	BODY	1
29	A 33964	SEAL	1
30	A 27508	PISTON	1
31	A 27358	"O" RING - piston	1
32	A 27351	SPRING - piston	1
33	A 9634	SLEEVE - piston	1
34	A 40459	KIT - repair, break-away couplings (includes ref. 20, 24, 25, 26, 29, 30, 31, 32, & 33)	1
35	A 36402	SUPPORT - hose (w/std. clutch only).	1
36	G 15434	SUPPORT - hose to trans. case.	1
37	G 10996	SUPPORT - hose to brake cover.	1
38	A 35209	CLAMP - hose (w/std. clutch only)	1
39	A 22768	PLUG - dust, socket.	1
40	A 28224	CLAMP - coupling	2
41	75- 416	SCREW - 1/4" x 3/4" rd. hd.	3
42	25- 104	NUT - 1/4" N. C. hex.	3
43	92- 4	LOCKWASHER - 1/4" std.	3
44	A 35439	BRACKET - coupling	1
45	13- 612	BOLT - 3/8" x 3/4" N. C. hex. hd.	2
46	92- 6	LOCKWASHER - 3/8" std.	2

