
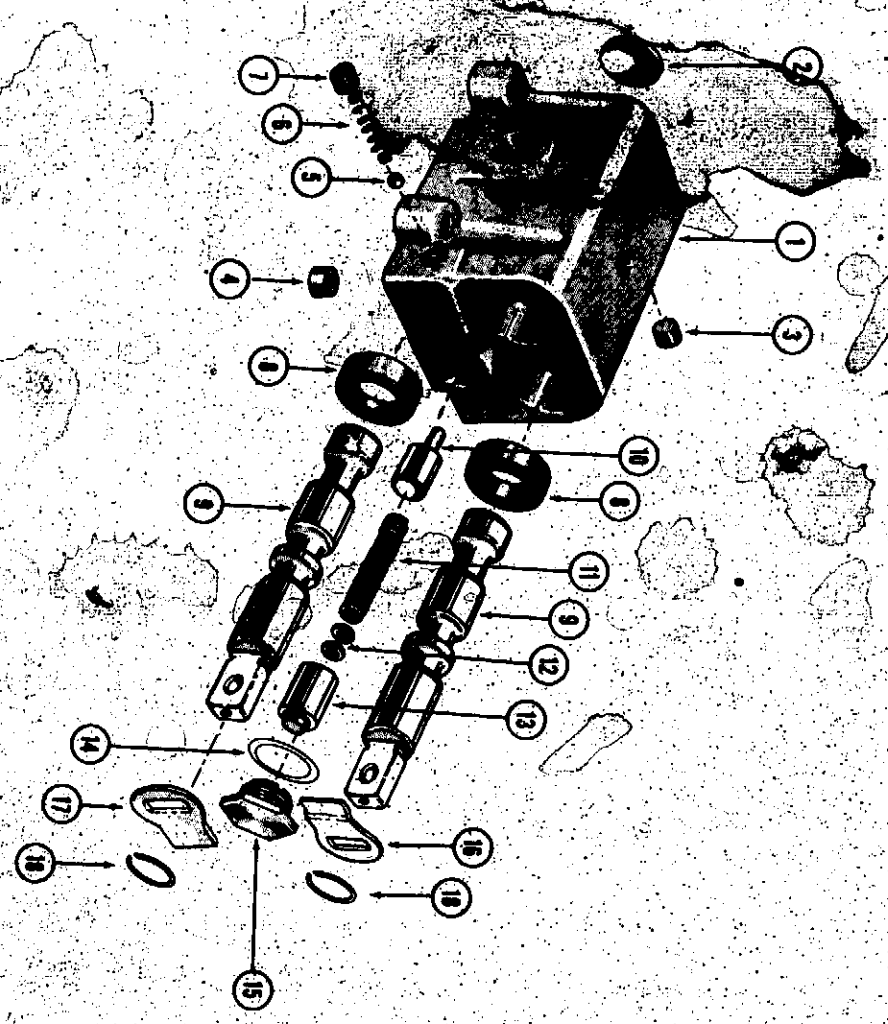


OIL FILTER AND COOLING TUBES
TORQUE CONVERTER DRIVE

REF.	PART NO.	DESCRIPTION	REQD
1	G 1248	CAP cover, filter body	1
2	13-616	BOLT 3/8" x 1" N. C. hex. hd	4
3	92-6	LOCKWASHER 3/8" std	4
4	A 29884	"O" RING - cover cap	1
5	A 29993	SPRING - filter element retainer	1
6	A 29236	CAP - retainer (Use with paper element)	1
6A	A 36523	CAP - retainer (Use with metal covered element)	1
7	13-428	BOLT 1/4" x 1-3/4" N. C. hex. hd	1
8	G 13113	ELEMENT - filter (paper) Use ref. 6A & 6A	1
8A	A 36524	ELEMENT - filter (metal covered)	1
9	G 1295	HOUSING oil filter element	1
10	13-614	BOLT 3/8" x 7/8" N. C. hex. hd	2
11	92-6	LOCKWASHER 3/8" std	2
12	A 35596	BRACKET filter housing	1
13	13-614	BOLT - 3/8" x 7/8" N. C. hex. hd	2
14	92-6	LOCKWASHER 3/8" std	2
15	A 35584	HOSE filter to radiator	1
16	G 45133	HOSE radiator to return tube	1
17	222-506	NUT tube and hose (81LB-1/2" O. D.)	5
18	A 36537	TUBE - return, hose to valve	1
19	A 36536	TUBE - torque tube to filter	1
20	A 35709	BRACKET support, oil tubes to engine	1
21	G 46835	GROMMET rubber, oil tubes	3
22	G 46194	CLAMP oil tubes	3
23	174-100	SCREW mach. #10-32 x 3/4" rd. hd	3
24	129-27	NUT #10-32 hex.	3
25	A 35583	RADIATOR	1

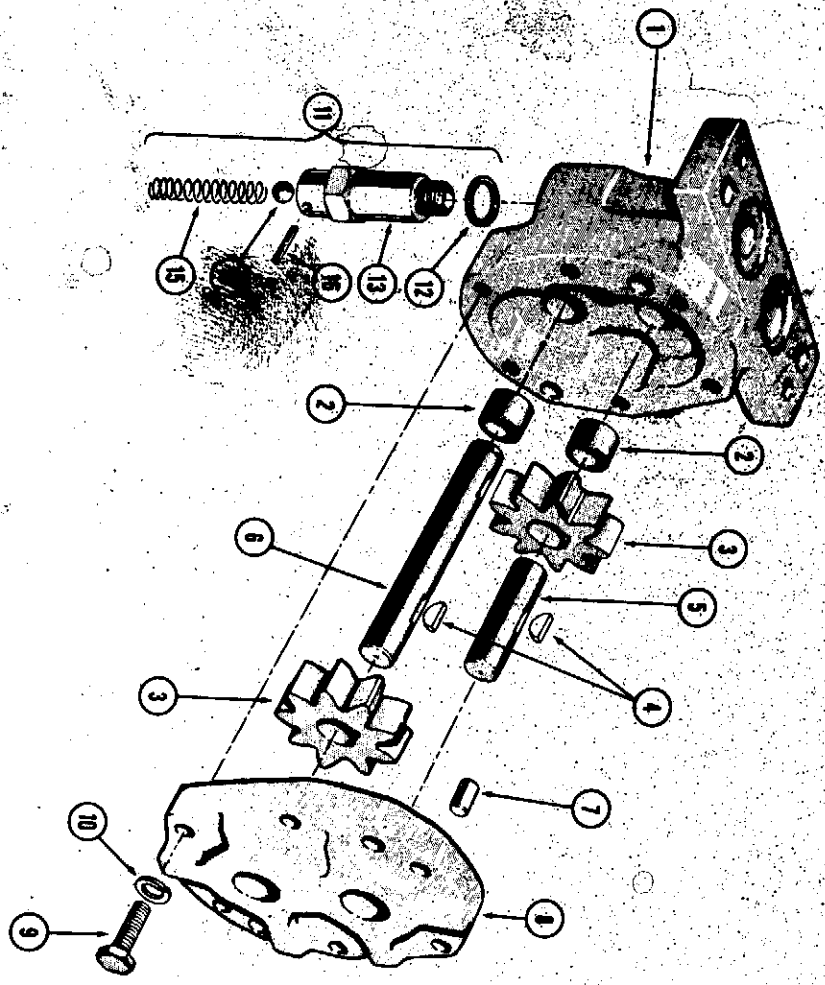


G14458 TORQUE CONVERTER CONTROL VALVE

REF.	PART NO.	DESCRIPTION	RECD
1	A 11504	BODY	1
2	A 29299	PLUG - spool opening	2
3	221- 1849	PLUG - pipe, 1/8" hex. socket hd.	1
4	A 20092	PLUG - pressure, regulator orifice	1
5	211- 7	BALL - steel, check valve	1
6	A 11517	SPRING - check valve	1
7	221- 1849	PLUG - pipe, 1/8" hex. socket hd.	1
8	A 11507	OIL SEAL - spool	2
9	A 11506	SPOOL	2
10	A 11510	PLUNGER - small, pressure regulator	1
11	A 11512	SPRING - pressure regulator	1
12	195- 10	WASHER - 3/16" plain	0-3
13	A 11511	PLUNGER - large, pressure regulator	1
14	A 11513	GASKET - cap, pressure regulator	1
15	A 11514	CAP - pressure regulator	1
16	G 16809	PLATE - interlock, R.H. spool	1
17	G 16808	PLATE - interlock, L.H. spool	1
18	A 29329	SNAP RING - interlock plate	2


G45386 TORQUE CONVERTER PUMP

1	A 11535	HOUSING - (Includes Ref. 2)	1
2	NSS	BUSHING	1
3	A 11523	GEAR	2
4	126- 9	KEY - gear to shaft (#3 Woodruff)	2
5	A 11525	SHAFT - idler	1
6	A 11522	SHAFT - drive	1
7	A 11528	PIN - dowel	2
8	A 11536	COVER - (Includes Ref. 2)	1
9	15- 412	BOLT - 1/4 x 3/4" N.C. hex. hd.	6
10	92- 4	LOCKWASHER - 1/4" std.	6
11	G 30570	VALVE - relief, complete	1
12	A 11530	GASKET - valve to body	1
13	NSS	BODY - (Order G30570)	1
14	211- 9	BALL - (5/16" chrome)	1
15	G 48512	SPRING - relief	1
16	138- 57	ROLL PIN - 1/8 x 3/4"	1

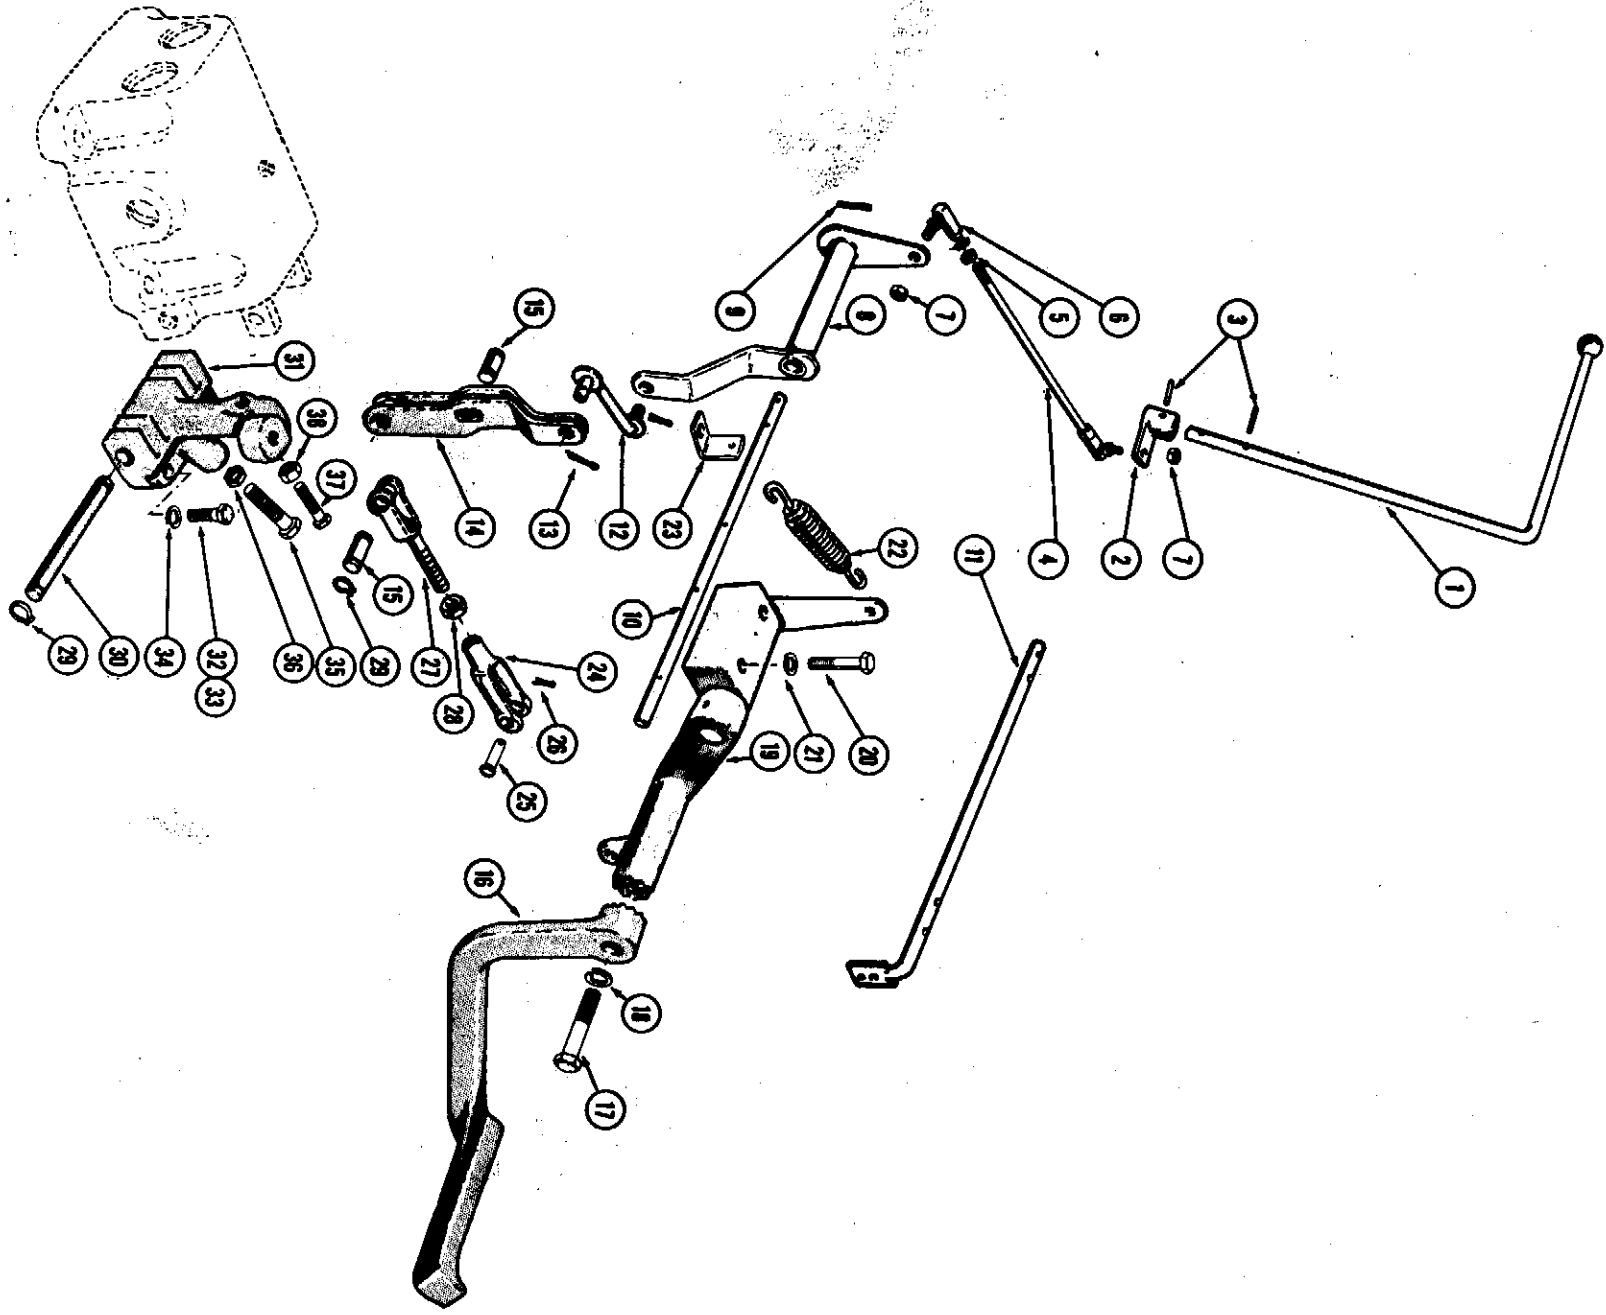


TORQUE CONVERTER CONTROL VALVE LINKAGE

REF.	PART NO.	DESCRIPTION	REQ'D
1	G 15621	HANDLE - direct drive control.	1
2	G 1338	LEVER - lower, direct drive	1
3	138- 75	ROLL PIN - 5/32" x 7/8"	2
4	G 45232	LINK ASSY. - ball joint	1
5	25- 114	NUT - 1/4" N. F. hex.	1
6	A 10329	BALL JOINT - front (Replaces G45350)	1
7	131- 902	NUT - lock, 1/4" N. F.	2
8	A 35645	LEVER ASSY. - cross shaft, direct drive.	1
9	138- 77	ROLL PIN - 5/32" x 1"	1
10	A 35637	SHAFT - cross (w/spark ignition engine)	1
11	A 35636	SHAFT - cross (w/diesel engine)	1
12	G 30260	LINK - cross shaft lever	1
13	132- 24	PIN - cotter, 3/32" x 1/2"	2
14	G 14133	LINK - direct drive spool	1
15	G 16824	PIN - link to spool	2
16	G 1301	PEDAL - foot	1
17	13- 832	BOLT - 1/2" x 2" N. C. hex. hd.	1
18	92- 8	LOCKWASHER - 1/2" std.	1
19	G 30324	LEVER ASSY. - Case-O-Matic drive	1
20	13- 628	BOLT - 3/8" x 1-3/4" N. C. hex. hd.	2
21	92- 6	LOCKWASHER - 3/8" std.	2
22	G 48509	SPRING - pedal return	1
23	G 15666	CLIP - return spring	1
24	213- 3	YOKE - control pedal	1
25	141- 3	PIN - yoke	1
26	132- 26	PIN - cotter, 3/32" x 3/4"	1
27	G 46228	YOKE - converter drive spool	1
28	25- 155	NUT - 5/16" N. F. hex. jam	1
29	G 46146	SNAP RING - pivot & link pin	6
30	G 16825	PIN - pivot	1
31	G 1381	SUPPORT - direct drive link	1
32	13- 616	BOLT - 3/8" x 1" N. C. hex. hd.	1
33	13- 634	BOLT - 3/8" x 2-1/8" N. C. hex. hd.	1
34	92- 6	LOCKWASHER - 3/8" std.	2
35	13- 616	BOLT - pedal adjusting, 3/8" x 1" N. C. hex.	1
36	25- 146	NUT - jam, 3/8" N. C. hex.	1
37	123- 100	BOLT - spool adj., 5/16" x 1-1/2" N. C. hex. hd.	1
38	25- 145	NUT - jam, 5/16" N. C. hex.	1

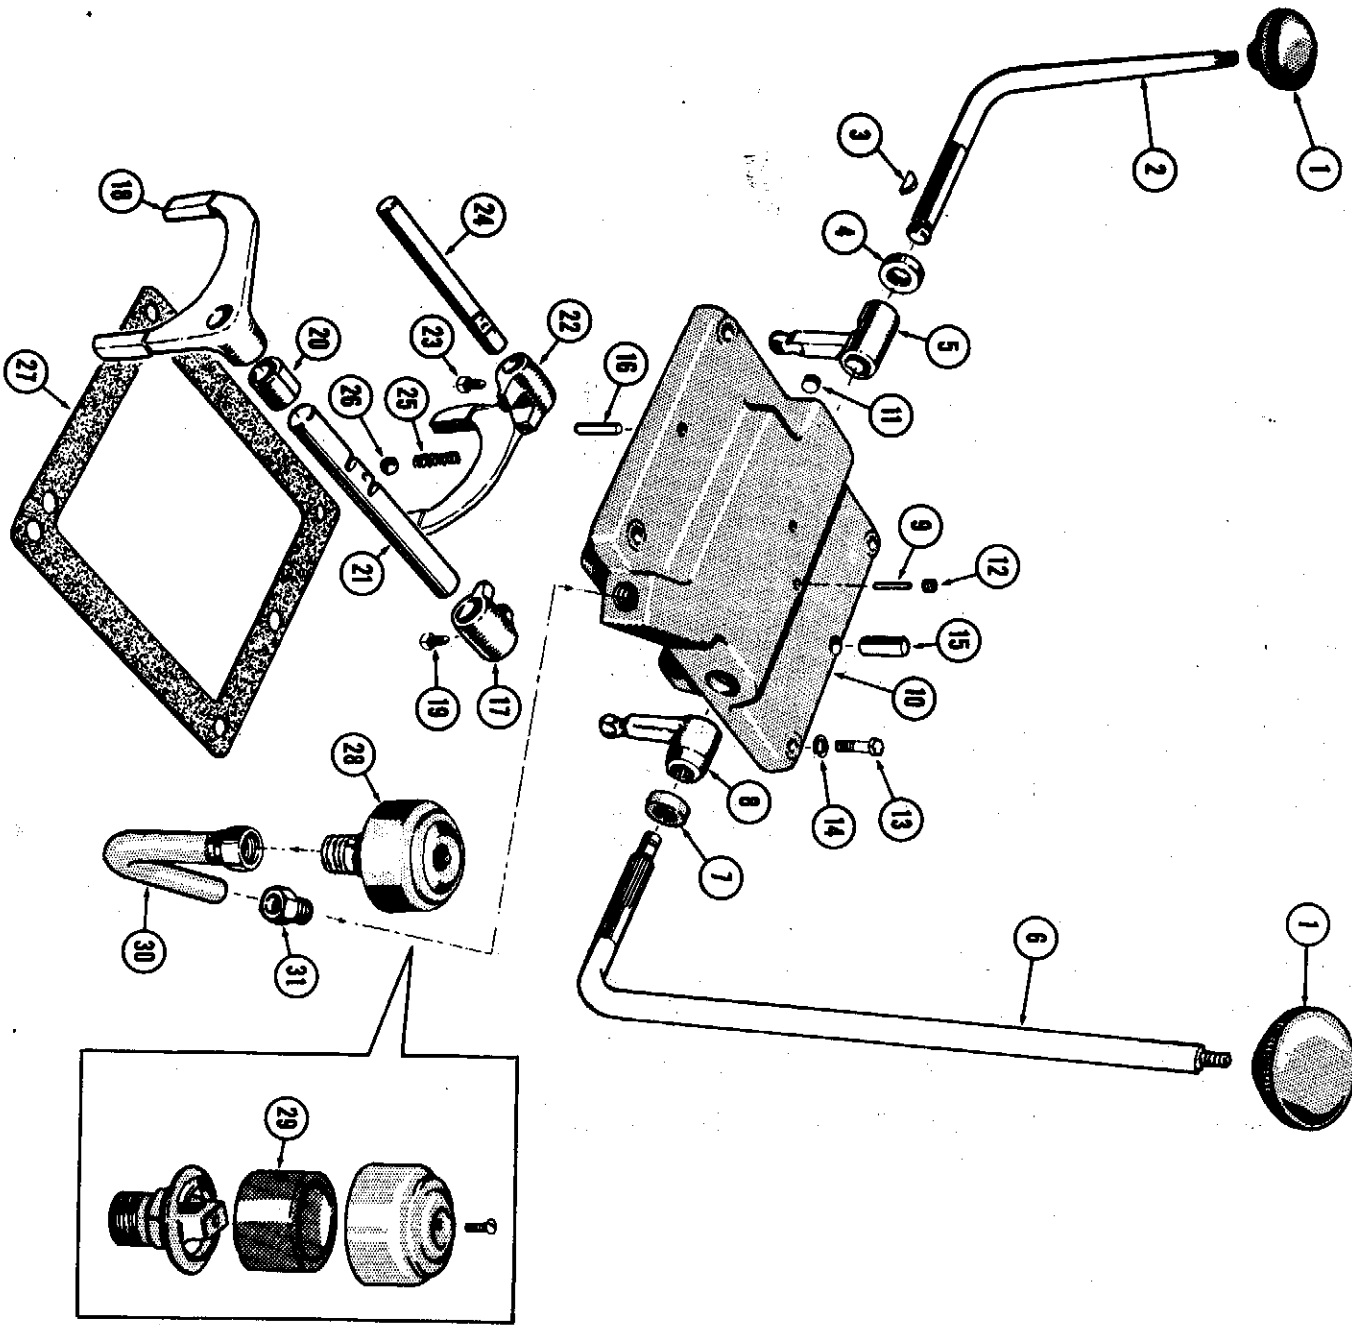


SHUTTLE TRANSMISSION CONTROL COVER

REF.	PART NO.	DESCRIPTION	REQ'D
1	A 26727	KNOB - control lever	2
2	G 15656	LEVER shift control, low and direct range	1
3	126- 12	KEY - #6 Woodruff	1
4	A 26778	OIL SEAL - shift lever, low and direct range	1
5	G 15657	LEVER shift fork, low and direct range	1
6	G 15658	LEVER shift control, shuttle	1
7	G 10450	OIL SEAL shift lever, shuttle	1
8	G 15659	LEVER shift fork, shuttle	1
9	138-61	ROLL PIN shift fork lever (1/8" x 1")	1
10	G 30369	COVER - shuttle control (includes Ref. 11 and 12) (Order 1-A37987 & 1-A37985)	1
11	221- 1849	PLUG - pipe, 1/8" roll thrd. hex. socket hd.	1
12	221- 1850	PLUG - pipe, 1/16" hex. socket hd.	2
13	13-620	BOLT 3/8" x 1-1/4" N. C. hex. hd.	4
14	92-6	LOCKWASHER 3/8" std.	4
15	G 10711	PIN dowel, control cover rear (1/2" x 3/4")	1
16	A 29426	PIN - dowel, control cover front (3/8 x 3/4")	1
17	G 16638	LUG - shuttle shift rail	1
18	G 16633	FORK shift, shuttle	1
19	A 29964	SCREW - lock, shift fork and lug	2
20	A 38203	SPACER - shuttle shift rail (Replaces G49612, G49628 & G49629)	1
21	G 30264	RAIL KIT - shift, shuttle (includes Ref. 20)	1
22	G 16632	FORK shift, low and direct range	1
23	A 29964	SCREW - lock, shift fork	1
24	A 37965	RAIL - shift, low and direct range (Replaces G16634)	1
25	G 47039	SPRING detent, shift rail	2
26	211- 11	BALL - detent, shift rail	2
27	G 46842	GASKET cover to torque tube	1
28	A 9238	BREATHER oil (includes ref. 29)	1
29	A 10059	ELEMENT filter, oil breather	1
30	G 30309	TUBE breather	1
31	222-508	NUT breather tube to cover (81LB-3/4")	1

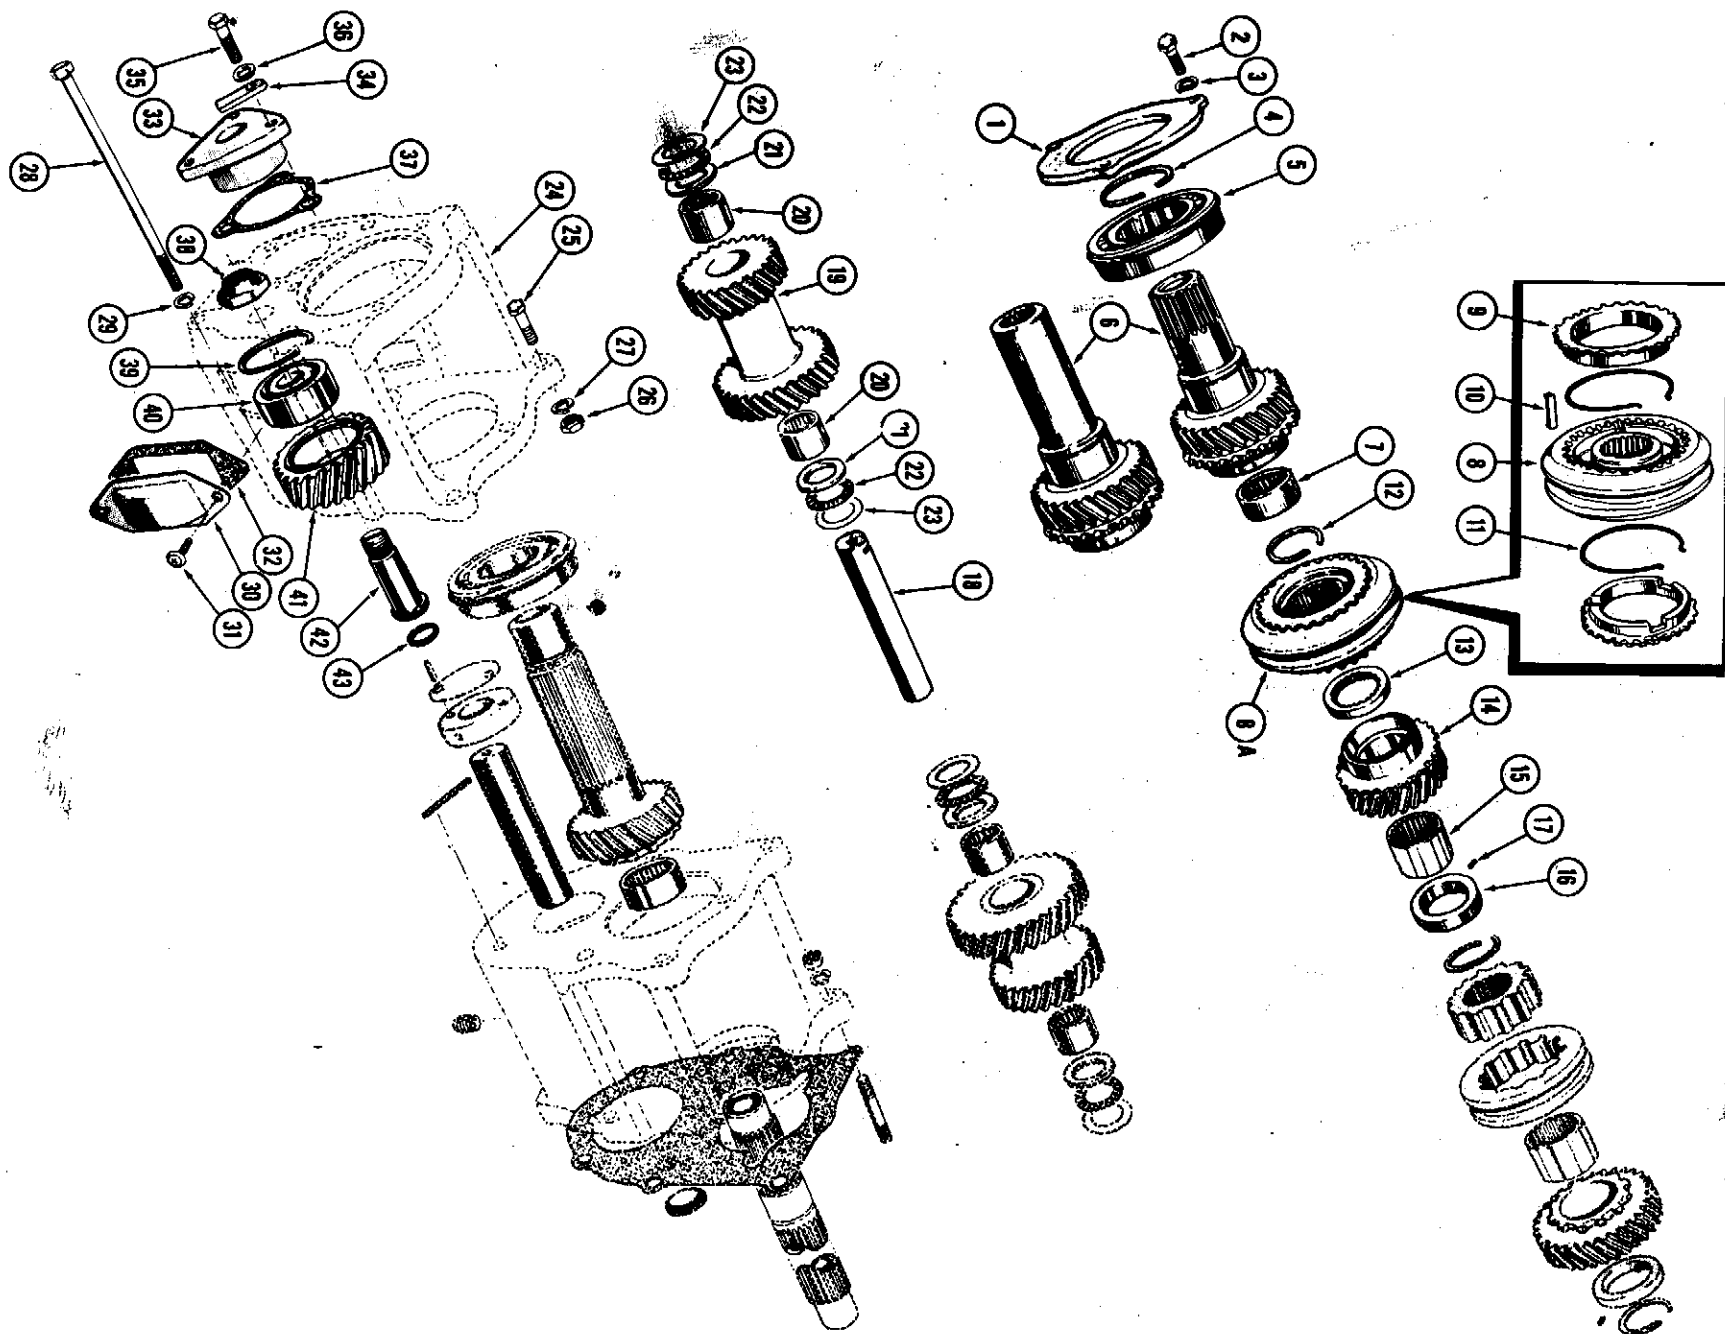


SHUTTLE GEAR HOUSING

REF.	PART NO.	DESCRIPTION	REQ'D
1	G 16627	RETAINER bearing, shuttle input gear	1
2	13-618	BOLT 3/8" x 1-1/8" N.C. hex. hd.	2
3	92-6	LOCKWASHER 3/8" std	3
4	A 27209	SNAP RING - bearing to shuttle input gear	1
5	G 13607	BEARING - ball, input gear(N D#4321-LXA)	1
6	G 16799	GEAR input, w/torque conv. drv. (ext. splines)	1
7	G 16626	GEAR input w/std. drv. (internal splines)	1
8	A 35767	BEARING needle, input gear(Torrington#JH-2212)	1
8A	G 45049	SYNCHRONIZER UNIT - complete	1
8	NSS	HUB & SLEEVE - synchronizer (Order G45049)	1
9	G 46077	RING - blocking	2
10	G 46078	PLATE - shifter	3
11	A 40766	SPRING - synchronizer unit	2
12	A 27565	SNAP RING - synchronizer unit (.076")	1
	A 27566	SNAP RING - synchronizer unit (.080")	1
	A 27567	SNAP RING - synchronizer (.083")	1
	G 46097	SNAP RING - synchronizer unit(.087")	1
13	A 27568	SNAP RING - synchronizer unit (.091")	1
14	G 16625	COLLAR thrust, shuttle output gear	1
15	G 16624	GEAR output, shuttle(27T)	1
16	G 16619	SLEEVE output gear, shuttle	1
17	G 13459	COLLAR thrust, shuttle output gear (incl. ref. 17)	1
18	G 138-18	ROLL PIN 5/64" x 3/8"	1
19	G 16617	COUNTERSHAFT cluster gear	1
20	G 16615	GEAR cluster, shuttle countershaft(25T and 30T)	1
21	G 10420	BEARING - cluster gear(Torrington#B1616)	2
22	G 46082	WASHER thrust, inner, cluster gear(.125")	2
	G 13609	BEARING thrust, cluster gear(Torrington#NTA-1625)	2
23	G 46081	WASHER thrust, outer, cluster gear(.031")	2
24	G 1255	HOUSING shuttle gear(w/torque conv. drv.)	1
	G 1205	HOUSING shuttle gear(w/std. drive)	1
25	13-628	BOLT 3/8" x 1-3/4" N.C. hex. hd.	3
26	25-106	NUT 3/8" N.C. hex	3
27	92-6	LOCKWASHER 3/8" std	3
28	13-6104	BOLT 3/8" x 6-1/2" N.C. hex. hd.	4
29	92-6	LOCKWASHER 3/8" std	4
30	G 16794	COVER gear opening (w/torque conv. only)	1
31	182-506	SCREW 5/16" x 1 1/2" pan hd. recessed Phillips (Spin lock)	2
32	G 46816	GASKET gear cover(w/torque conv. only)	1
33	G 1206	BUSHING frt. countershaft	1
34	G 16618	LOCK countershaft	1
35	13-624	BOLT 3/8" x 1-1/2" N.C. hex. hd.	1
	13-618	BOLT 3/8" x 1-1/8" N.C. hex. hd.	2
36	92-6	LOCKWASHER 3/8" std	3
37	G 16616	SHIM cluster gear(.005")	1
38	G 16614	NUT idler gear stud	1
39	A 27150	SNAP RING - bearing, idler gear	1
40	G 13608	BEARING ball idler, gear(N.D.#5304LXA)	1
41	G 16612	GEAR reverse idler(24T)	1
42	G 16613	STUD reverse idler gear	1
43	A 27365	"O" RING - between housings	1

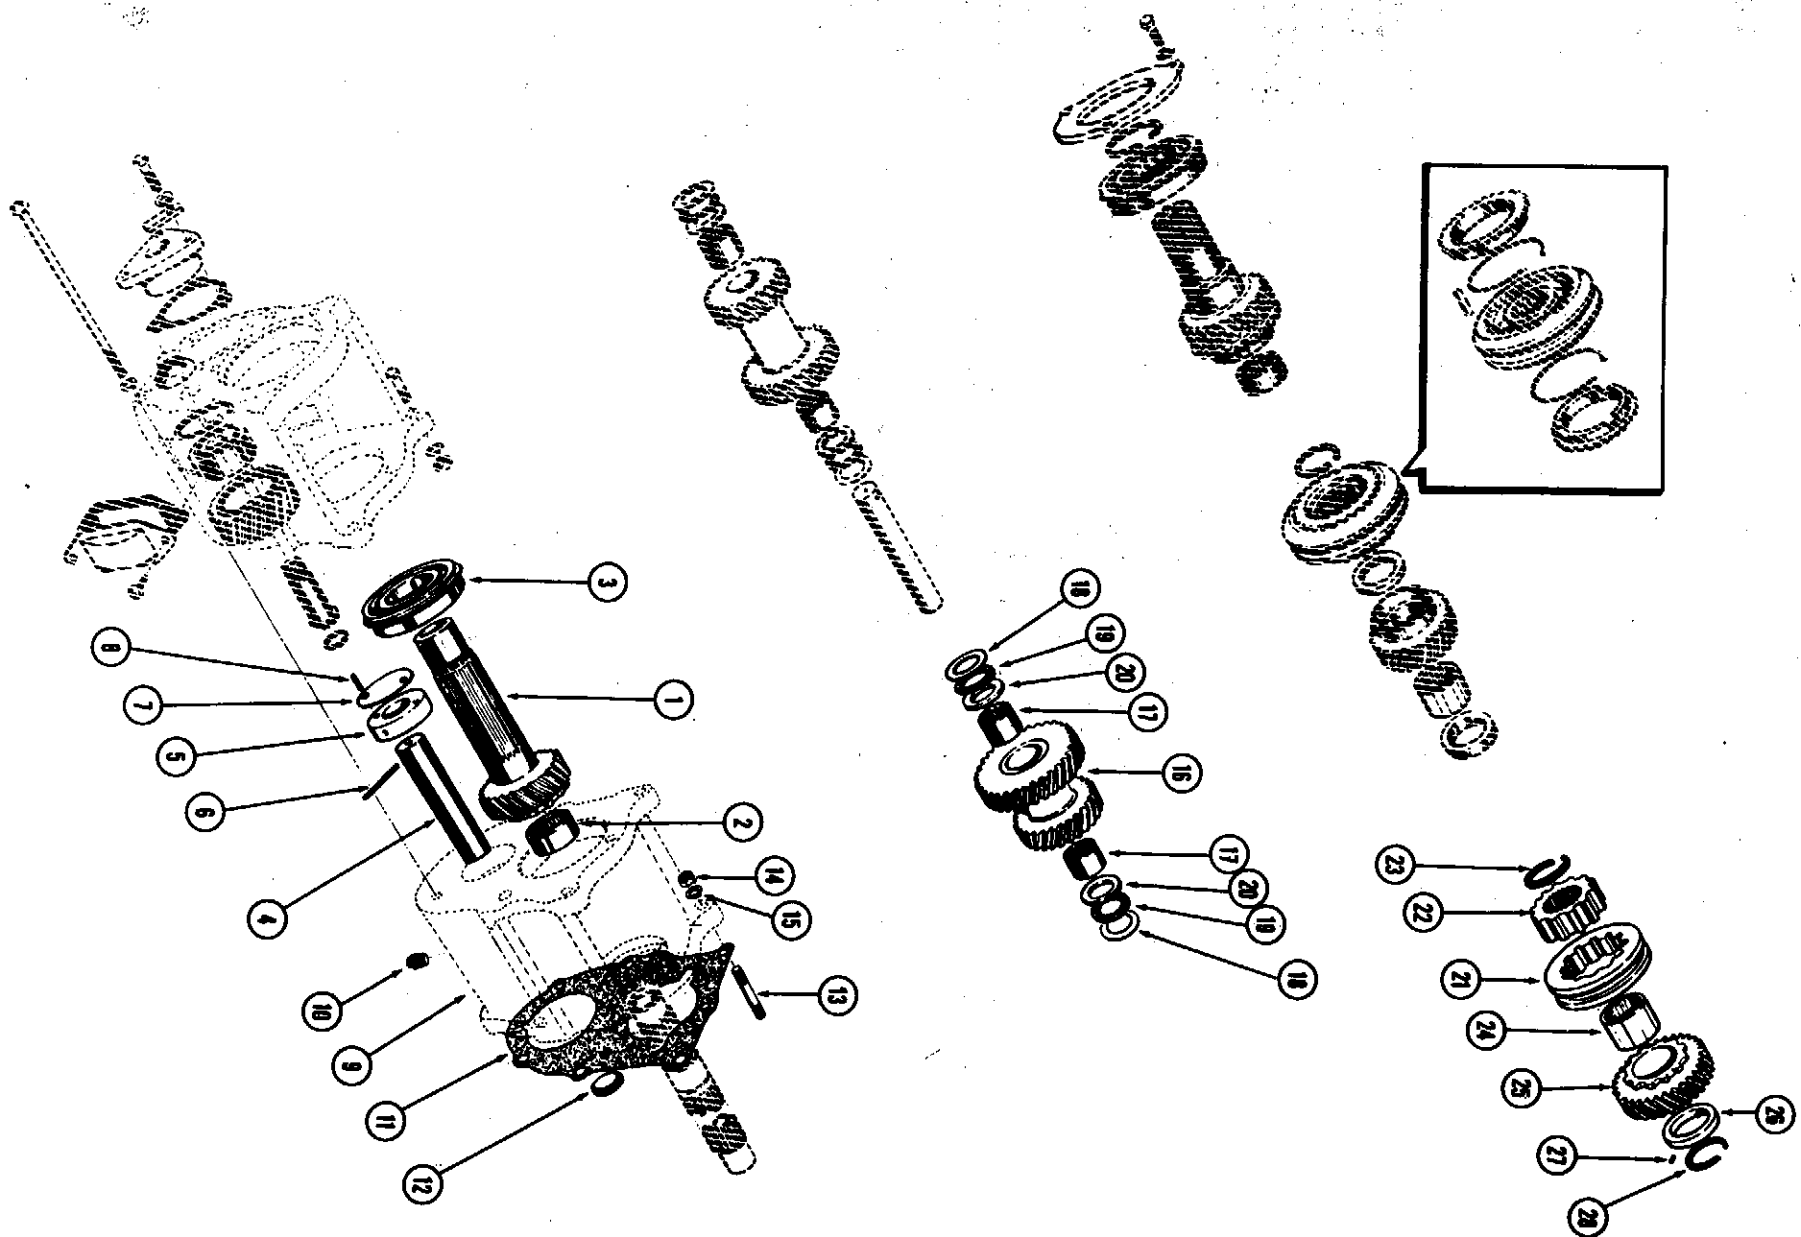

DUAL RANGE GEAR HOUSING

REF.	PART NO.	DESCRIPTION	REQ D
1	G 16623	GEAR - input (25 T)	1
2	G 10419	BEARING - needle, input gear	1
3	G 13906	BEARING - ball, input gear (N.D. #43208 LY1A)	1
4	G 16606	COUNTERSHAFT - low range	1
5	G 16607	COLLAR - countershaft	1
6	138- 104	ROLL PIN - collar to countershaft, 3/16" x 2	1
7	G 16608	SHIM - countershaft (.005")	UAR
8	138- 88	ROLL PIN - shim to collar, 3/16 x 3/8"	2
9	G 1254	HOUSING - low range gear	1
11	G 46841	GASKET - housing to trans. case	1
12	A 30084	PLUG - rear, housing (1-1/2" Welch)	1
13	G 10710	STUD - hsg. to trans. case (3/8 x 1-3/4")	7
14	25- 116	NUT - 3/8" N.F. hex.	7
15	92- 6	LOCKWASHER - 3/8" stud	7
16	G 16611	GEAR - cluster, countershaft (34 T and 27 T)	1
17	F 51079	BEARING - needle, cluster gear (Torrington #JH 1616-OH) ..	2
18	G 46081	WASHER - thrust, outer, cluster gear (.031")	2
19	G 13609	BEARING - thrust, cluster gear (Torrington #NTA-1625) ..	2
20	G 46082	WASHER - thrust, inner cluster gear (.125")	2
21	A 38153	COLLAR - shift (Replaces G16622)	1
22	G 16621	CARRIER - shift collar (24 T)	1
23	A 27565	SNAP RING - shift cover (.076")	1
	A 27566	SNAP RING - shift collar (.080")	1
	A 27567	SNAP RING - shift collar (.083")	1
	G 46097	SNAP RING - shift collar (.087")	1
	A 27568	SNAP RING - shift collar (.091")	1
24	G 16619	SLEEVE - output gear	1
25	G 16620	GEAR - output (32 T)	1
26	G 13458	COLLAR - thrust, output gear (includes Ref. 27)	1
27	138- 18	ROLL PIN - thrust collar, 5/64" x 3/8"	1
28	A 26946	SNAP RING - thrust collar	1

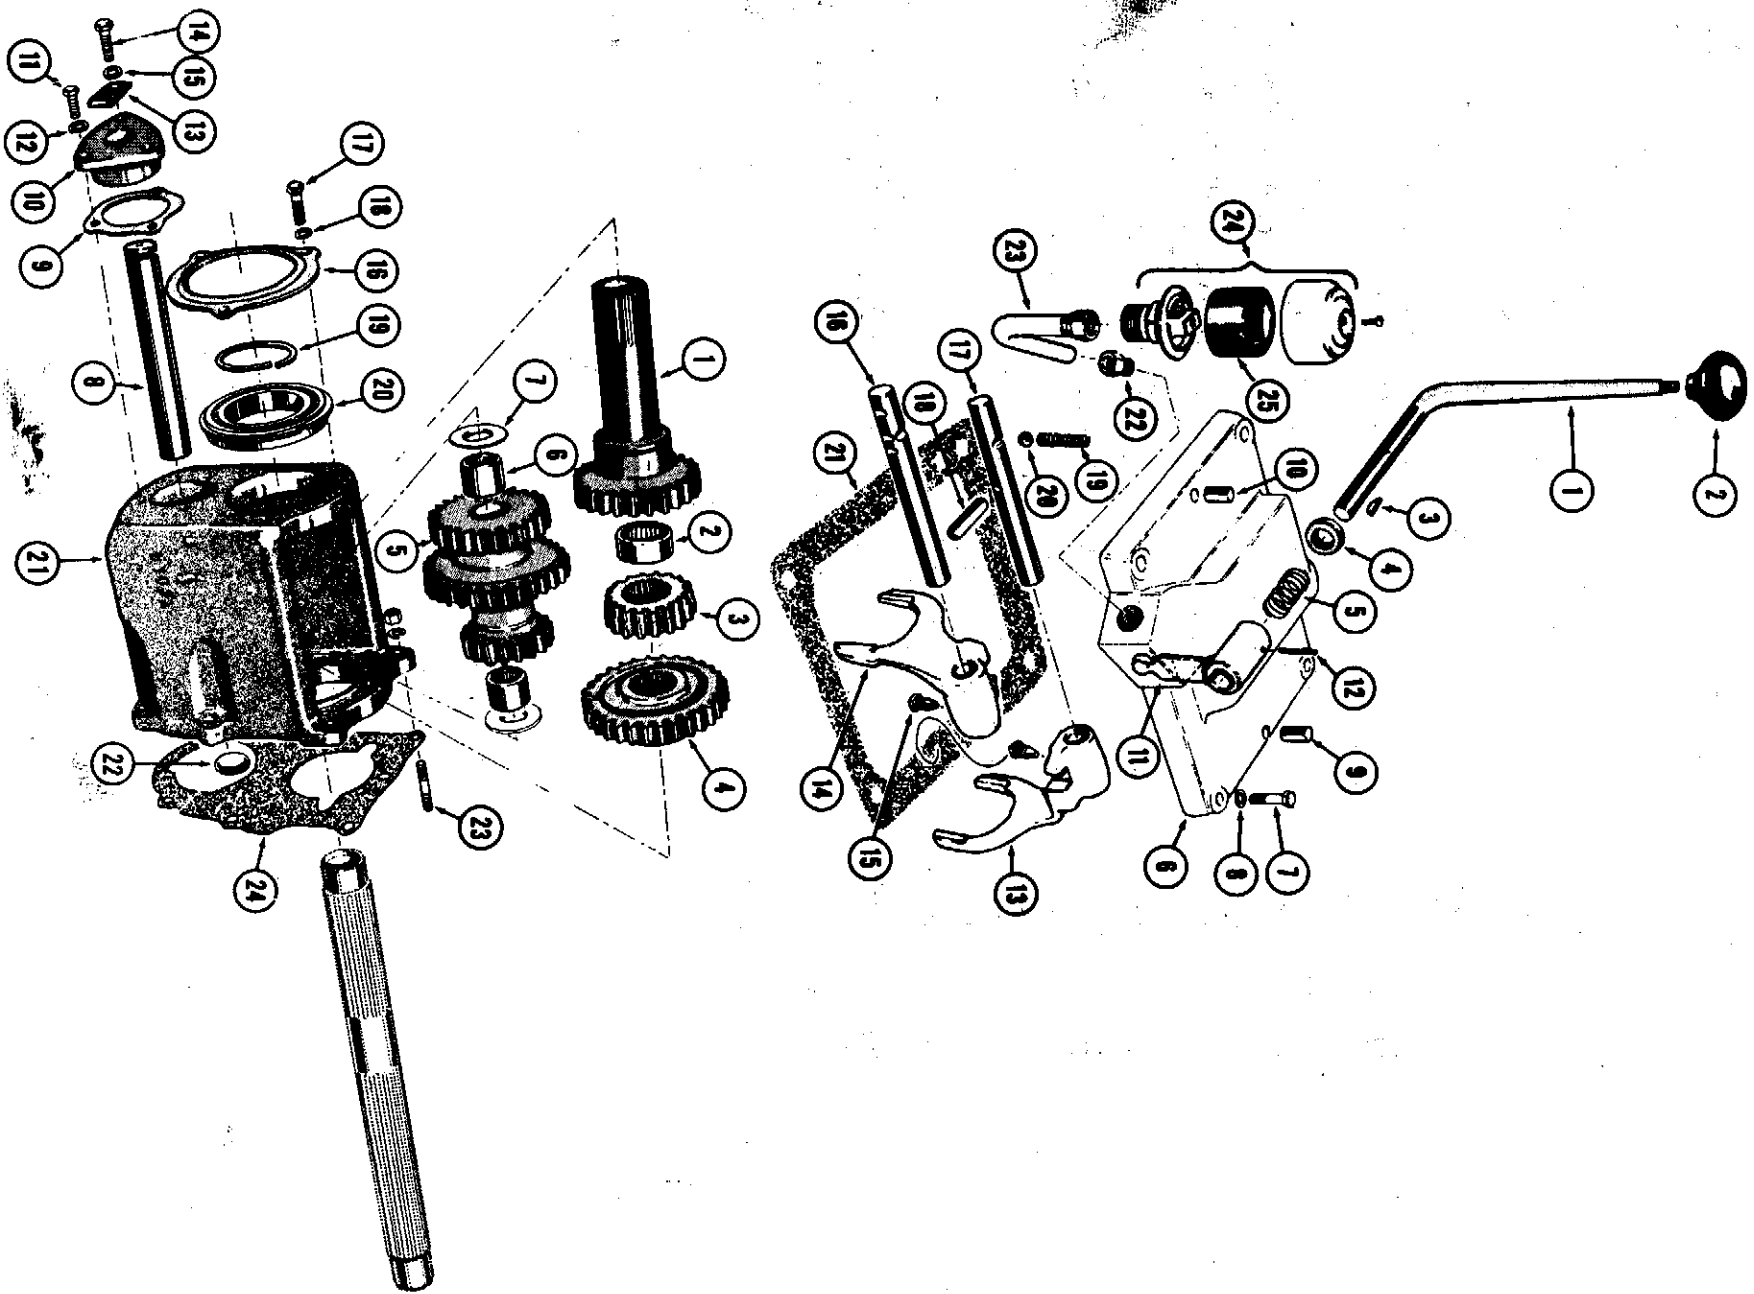


TRIPL-RANGE CONTROL COVER

REF.	PART NO.	DESCRIPTION	REQ'D
1	G 15655	LEVER - hand (Order 1-A36856, 1-A36873 & 1-136-2024)	1
2	A 26727	KNOB - hand lever	1
3	A 126-12	KEY #6 Woodruff	1
4	A 26778	OIL SEAL - hand lever	1
5	G 10715	SPRING hand lever	1
6	G 1361	COVER control	1
7	13-624	BOLT 3/8" x 1-1/2" N.C.hex.hd.	1
8	92-6	LOCKWASHER 3/8" std.	1
9	G 10711	PIN dowel, rear(1/2" x 3/4")	1
10	A 29426	PIN - dowel, front (3/8 x 3/4")	1
11	G 16663	LEVER - shift fork, low range	1
12	138-45	ROLL PIN - 3/32" x 1"	1
13	G 10399	FORK - shift, low range	1
14	G 10398	FORK - shift, direct and high range	1
15	A 29964	SCREW - lock, shift fork	2
16	G 10392	RAIL shift, direct and high range	1
17	G 10394	RAIL shift, low range	1
18	G 10391	PLUG interlock, shift rail	1
19	G 47039	SPRING detent, shift rail	2
20	211- 11	BALL - detent, shift rail	2
21	G 46842	GASKET control cover	1
22	222-508	NUT breather tube to cover(81LB-3/4")	1
23	G 30309	TUBE breather	1
24	A 9238	BREATHER oil, torque tube(incl.ref.25)	1
25	A 10059	ELEMENT filter, oil breather	1


TRIPL-RANGE HOUSING

1	G 10442	GEAR input(24T)	1
2	G 10419	BEARING needle,input gear(Torrington#BH2212)	1
3	G 10374	GEAR direct and high(18T)	1
4	G 10375	GEAR low(30T)	1
5	G 10378	GEAR cluster, countershaft(24T),30T,18T)	1
6	G 10420	BEARING needle, cluster gear(Torrington#B-1616)	2
7	G 46071	WASHER thrust, countershaft	2
8	G 10372	COUNTERSHAFT	1
9	G 10386	SHIM countershaft(.005")	UAR
10	G 10387	SHIM countershaft(.0075")	UAR
11	14109	BUSHING countershaft(incl.ref 7)	1
12	13-516	BOLT 5/16" x 1" N.C.hex.hd.	2
13	G 10368	LOCKWASHER 5/16" std.	2
14	13-620	LOCK countershaft	1
15	92-5	BOLT 5/16" x 1-1/4" N.C.hex.hd.	1
16	G 10361	LOCKWASHER 5/16" std.	1
17	G 49000	RETAINER bearing input gear	1
18	92-5	BOLT drilled, 5/16" x 3/4" N.C.hex.hd.	3
19	A 30087	LOCKWASHER 5/16" std.	3
20	A 33537	SNAP RING - bearing, to input gear	1
21	G 14108	BEARING - input gear (N. D. 43L11-SA60N)	1
22	A 30084	HOUSING Tripl-Range(incl.ref 7)	1
23	G 10710	PLUG - expansion, housing	1
24	25-116	STUD housing to trans.case(3/8"x1-5/8")	7
25	92-6	NUT 3/8" N.F.hex	7
26	46841	LOCKWASHER 3/8" std	7
27		GASKET housing to trans.case	1

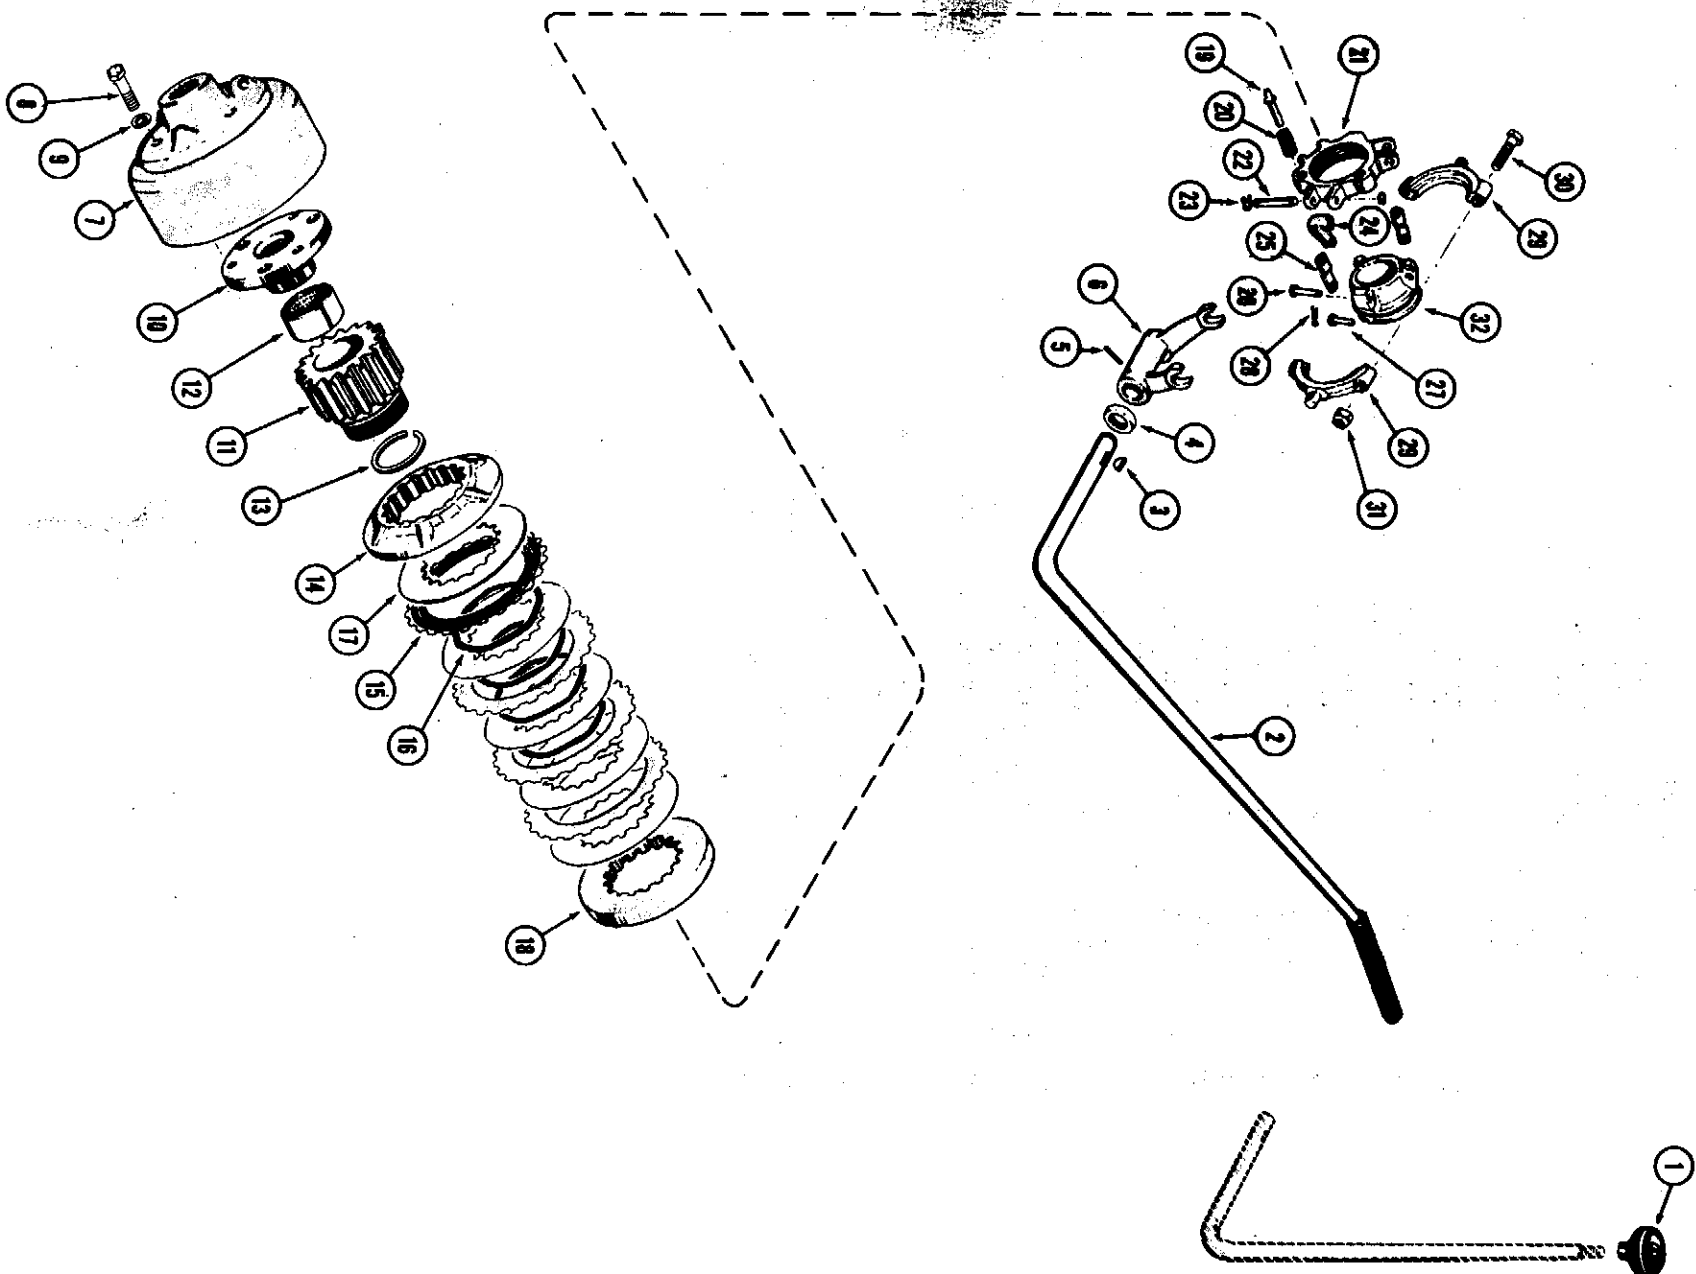

HAND CLUTCH

REF.	PART NO.	DESCRIPTION	REQ'D
1 A	26727	KNOB - clutch lever (For old style lever)	1
2 A	37018	LEVER - hand clutch	1
3	126-12	KEY #6 Woodruff.	1
4 A	50421	OIL SEAL - hand lever (Replaces G13827)	1
5	138-99	ROLL PIN yoke to clch.lvr.(3/16" x 1-3/8")	1
6 G	10439	YOKE clutch throwout.	1
7 G	10440	DRUM clutch.	1
8 G	49021	BOLT drilled, drum to hub	3
9 92-	6	LOCKWASHER - 3/8" std.	3
10 G	10441	HUB clutch drum	1
11 G	14059	HUB clutch assembly(incl.ref.12 and 13).	1
12 G	10437	BUSHING clutch hub	1
13 G	10438	SNAP RING clutch hub	1
14 A	7107	PLATE locking	1
15 A	11127	PLATE clutch drv.(external tooth).	5
16 A	27591	SPRING - separator, clutch plate	5
17 A	57170	PLATE - clutch drv. (Internal tooth)(Replaces A7102)	6
18 A	26225	PLATE - pressure	1
19 A	34248	PIN - lock, clutch adjusting yoke	2
20 A	26944	SPRING - lock, pin, clutch adjusting	2
21 A	27592	YOKE - adjusting, clutch	1
22 G	10658	PIN pivot, clutch finger	3
23 G	10659	SNAP RING pivot pin	6
24 A	36552	FINGER - clutch	3
25 A	57917	LINK - clutch finger (Replaces A27596)	6
26 A	8824	PIN inner, link(1-15/64")	3
27 A	8823	PIN outer,link(1-1/32")	3
28	132-24	PIN cotter, 3/32" x 1/2"	6
29 A	28596	COLLAR - throwout (includes ref. 30 and 31).	1
30	14-532	BOLT 5/16" x 2" N.F. hex.hd.	2
31	131-3	NUT stop, 5/16" N.F. hex.	2
32 A	26226	SLEEVE - sliding clutch throwout.	1

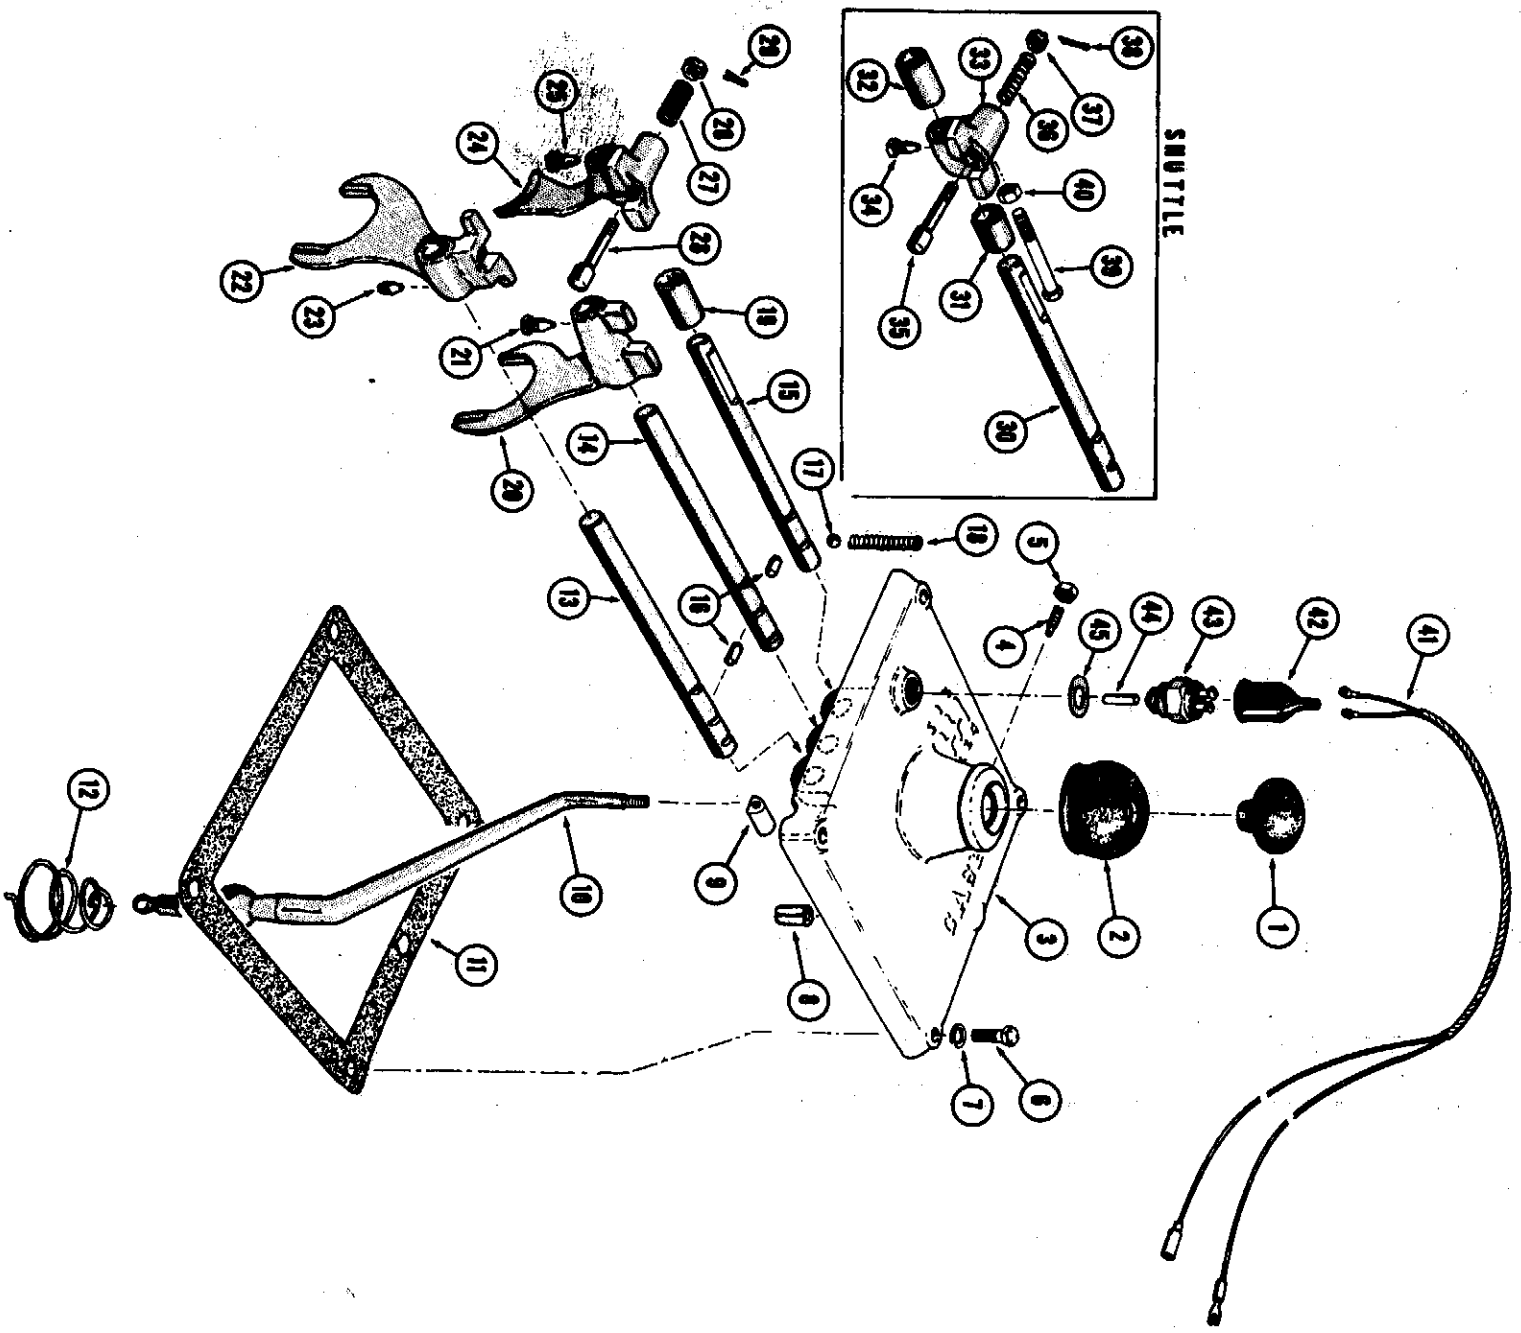


466 3003

GEAR SHIFT COVER

REF.	PART NO.	DESCRIPTION	REQ'D
1 A	26727	KNOB - shift lever	1
2 A	57876	COVER - dust, shift lever (Replaces A26856)	1
3 G	1328	COVER control	1
4 G	15468	SCREW retaining, shift lever	1
5	25-145	NUT jam, 5/16" N.C. hex	1
6	13-624	BOLT cover, 3/8" x 1-1/2" N.C. hex. hd.	4
7	92-6	LOCKWASHER 3/8" std.	4
8	138-200	ROLL PIN cover to trans. case (1/2" x 1")	1
9 G	10799	SEAL rubber, speedometer cable	1
10 G	15628	LEVER gear shift	1
11 G	10342	GASKET cover to transmission case	1
12 G	10611	SPRING support, shift lever	1
13 G	10327	RAIL - shift, 3rd and 4th speeds	1
14 G	10326	RAIL - shift, 1st and 2nd speeds	1
15 A	35313	RAIL reverse shift.	1
16 A	29060	PLUG - interlock, shift rail	2
17 211-	11	BALL - mesh lock, shift rail (3/8" dia.)	3
18 G	47039	SPRING mesh lock	3
19 G	49611	SPACER reverse shift rail (1-1/4" long)	1
20 A	41467	FORK - shift, 1st and 2nd speeds (Replaces G10332)	1
21 A	29964	SCREW - lock	1
22 A	41468	FORK - shift, 3rd and 4th speeds (Replaces G10333)	1
23 A	29965	SCREW - lock	1
24 G	10334	FORK shift, reverse (not used with shuttle)	1
25 A	29964	SCREW - lock	1
26 A	29963	PLUNGER - reverse latch	1
27 T	25643	SPRING - plunger, reverse latch	1
28	25-135	NUT slotted, 5/16" N.F.	1
29	132-5	PIN cotter, 1/16" x 1/2"	1
30 A	35313	RAIL reverse shift.	1
31 G	49632	SPACER rear, reverse shift rail (3/4" lg.) w/ shuttle only.	1
32 G	49611	SPACER reverse shift rail (1-1/4" lg.)	1
33 G	15585	LUG reverse shift rail (w/shuttle only)	1
34 A	29964	SCREW - lock	1
35 A	29963	PLUNGER - reverse latch	1
36 T	25643	SPRING - plunger, reverse latch	1
37	25-135	NUT slotted, 5/16" N.F.	1
38	132-5	PIN cotter, 1/16" x 1/2"	1
39	13-548	BOLT 5/16" x 3" N.C. hex. hd.	1
40	25-105	NUT 5/16" N.C. hex	1
41 G	44066	CABLE safety sw. to starting sw & solenoid.	1
42 A	20991	BOOT cover, safety sw.	1
43 A	20990	SWITCH - safety, neutral starting.	1
44 G	15574	PLUNGER safety switch	1
45 G	49401	SHIM safety switch (.005")	UAR
	49402	SHIM safety sw. (.010")	UAR

Pl-Mason 48 5-5-90
209

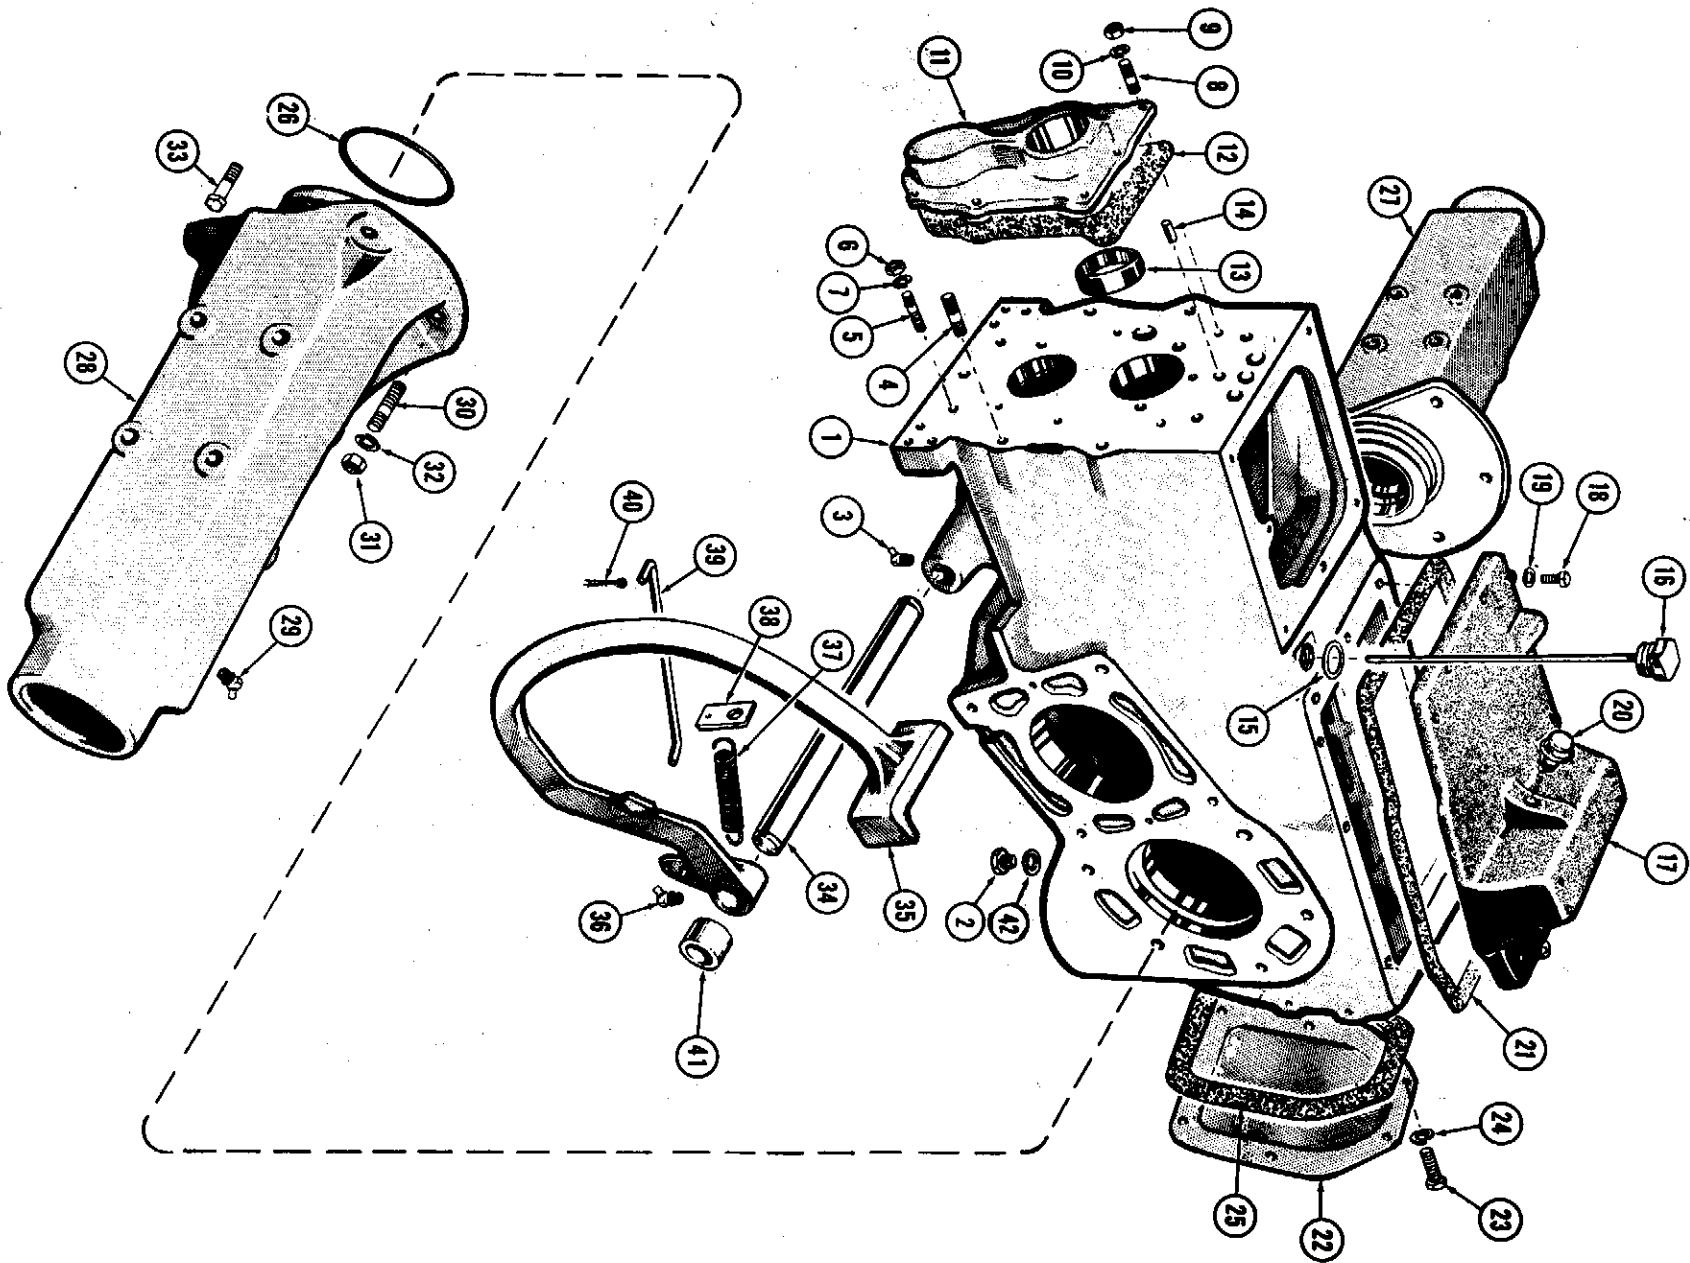

TRANSMISSION CASE AND AXLE HOUSINGS

REF.	PART NO.	DESCRIPTION	REQ'D
1	A 37101	CASE - transmission	1
2	A 14280	PLUG - drain	1
3	219- 36	FITTING - grease, 1/8" 45°	2
4	G 49500	STUD torque to trans. (1/2" x 2-3/16")	2
5	A 38707	STUD - torque to trans. (1/2 x 2-1/2") (Replaces A29336)	8
6	25-118	NUT 1/2" N.F. hex.	10
7	92-8	LOCKWASHER 1/2" std	10
8	G 10710	STUD - frt. cover to case (3/8" x 1-3/4").	7
9	25-116	NUT 3/8" N.F. hex.	7
10	92-6	LOCKWASHER 3/8" std	7
11	G 1027	COVER frt. trans. case w/4 speed trans. only)	1
12	G 46841	GASKET front cover.	1
13	G 10311	COLLAR pilot	1
14	A 29540	DOVEL - torque tube to trans. case (1/2 x 1-5/16").	2
15	G 10351	GASKET dipstick.	1
16	A 38306	DIPSTICK - oil level (Replaces G10348)	1
17	G 1097	COVER top rear	1
18	113- 828	BOLT - 3/8" x 1-1/4" N. C. hex. hd. (Gr. 8).	8
19	113- 236	BOLT - 3/8" x 2" N. C. hex. hd. (Gr. 8).	4
20	A 27173	LOCKWASHER 3/8" std	12
21	G 10941	BREATHER - oil. rear cover	1
22	A 36885	GASKET - rear cover	1
23	13-616	COVER - rear (P. T. O. opening)	1
24	92-6	BOLT 3/8" x 1" N.C. hex hd	6
25	G 10447	LOCKWASHER 3/8" std	6
26	G 10347	GASKET rear cover	1
27	A 37068	"O" RING axle housing	2
28	A 37069	HOUSING - R. H. axle	1
29	219-36	HOUSING - L. H. axle	1
30	G 49510	FITTING 1/8" 45° (Lincoln #5300)	1
31	A 26855	STUD axle housing (5/8"x2-11/16").	6
32	25-1110	STUD - axle housing (5/8 x 4-5/8")	2
33	13- 1032	NUT 5/8" N.F. hex	8
34	G 10708	LOCKWASHER	10
35	G 1412	BOLT - axle hsg., 5/8 x 2" N. C. hex. hd.	2
36	219- 40	SHAFT cross, clch. & brk. pedal	1
37	A 35789	PEDAL clutch	1
38	G 15912	FITTING - grease, 1/8" 67-1/2°	1
39	G 10748	SPRING return, clutch pedal	1
40	132-26	BRACKET clutch spring	1
41	G 16783	ROD link, clutch pedal	1
42	A 58608	PIN cotter, 3/32" x 3/4"	2
		SPACER - cross shaft (in place of G1412 clutch pedal w/Case-O-Matic)	1
		GASKET - drain plug	1

